

LECS /LECS -T/LECY Series



AC Servo Motor Drivers

LECS /LECS -T/LECY Series List


[Compatible motor			Control method		Application/Function		Compatible ention		
Series		100 W	200 W	400 W	750 W	*1 Positioning	Pulse	Network direct input	*2 Sunchronous	Pushing operation*4	Compatible option Setup software
Incremental Type	LECSA (Pulse input type/ Positioning type)	•	•	•		Up to 7 points	0				LEC-MRC2
	LECSB (Pulse input type)	•	•	•			0				LEC-MRC2
	CC-Link LECSC (CC-Link direct input type)	0	0	0		Up to 255 points		CC-Link Ver. 1.10			LEC-MRC2
	SSCNET III LECSS (SSCNET III type) Compatible with Mitsubishi Electric's servo system controller network	•	0	0				SSCNETI	*2	*4	LEC-MRC2
Эе	LECSB-T (Pulse input type/ Positioning type)	•	•	0	0	Up to 255 points	0			*4	LEC-MRC2
Absolute Type	CC-Link LECSC-T (CC-Link direct input type)	0	•	•		Up to 255 points		CC-Link Ver. 1.10			LEC-MRC2
A	Ether CAT. Ether Net/IP LECSN-T (Network card type)	0	•	•	•	Up to 255 points		PROFINET EtherCAT EtherNet/IP™			LEC-MRC2
	LECSS-T (SSCNET III /H type) Compatible with Mitsubishi Electric's servo system controller network	0	0	0				SSCNET II/H	*2	*4	LEC-MRC2
	LECYM	•	•	0				MECHATRO LINK-II	*3		SigmaWin+™
	MECHATROLINK-II	•	•	0				MECHATRO LINK-II	*3		SigmaWin+™

*1 For positioning types, the settings need to be changed in order to use the max. set values. Setup software (MR Configurator2[™]) LEC-MRC2 is required.
 *2 Available when a Mitsubishi motion controller is used as the master
 *3 Available when a motion controller is used as the master

*3 Available when a motion controller is used as the master
*4 The LECSB2-T is only applicable when the control method is positioning. The point table is used to set the pushing operation settings. To set the pushing operation settings, an additional dedicated file (pushing operation extension file) must be downloaded separately to be used with the setup software (MR Configurator2[™]: LEC-MRC2[□]). Please download this dedicated file from the SMC website: https://www.smcworld.com
When selecting the LECSS or LECSS2-T, combine it with a master station (such as the Simple Motion module manufactured by Mitsubishi Electric Corporation) which has a pushing operation function.
** For customer-provided PLC and motion controller setting and usage instructions, confirm with the retailer or manufacturer.
*5 Only supports PROFINET and EtherCAT



LECS /LECS -T/LECY Series

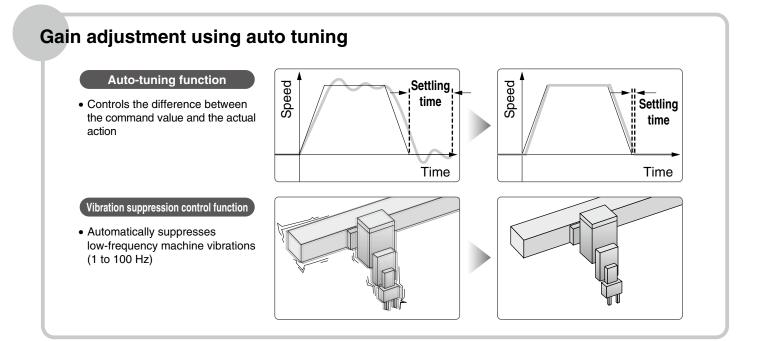

With display setting function

One-touch adjustment button

One-touch servo adjustment

Display

Display the monitor, parameters, and alarm.

Set the parameters, monitor display, etc.,

with push buttons.

Settings



LECSA

Display

Display the communication status with the driver, the alarm, and the point table no.

Settings

Control the Baud rate, station number, and the occupied station count.

Display

Display the monitor, parameters, and alarm.

Settings

Set the parameters, monitor display, etc., with push buttons.

Display

Display the communication status with the driver and the alarm.

Settings


Switches for axis setting, control axis deactivation, switching to the test operation, etc.

Settings

Switches for station address, communication speed, number of transmission bytes, etc.

Display

Display the driver status and alarm.

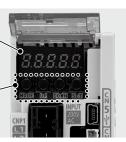

(With the front cover opened)


LECSC

SD

(With the front cover opened) LECSB-T



LECSS2-T

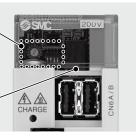

LECYM

Display

Display the monitor, parameters. and alarm.

Settings

Set the parameters, monitor display, etc., with push buttons.



(With the front cover opened) LECSB

Display

Display the communication status with the driver and the alarm

Settings

Switches for selecting the axis and switching to the test operation



(With the front cover opened) LECSS

Display

Display the communication status with the driver, the alarm, and the point table no.

Settings

Control the Baud rate, station number, and the occupied station count.



Display

Display the communication status with the driver and the alarm.

Settings

Switches for axis setting, switching to the test operation, etc.

LECSN-T

Settings

Switches for station address, number of transmission bytes, etc.


Display


Display the driver status and alarm




A /s




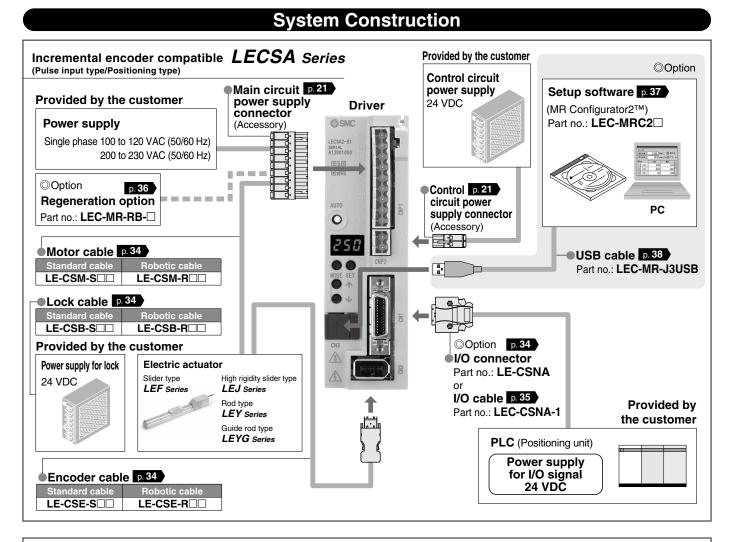

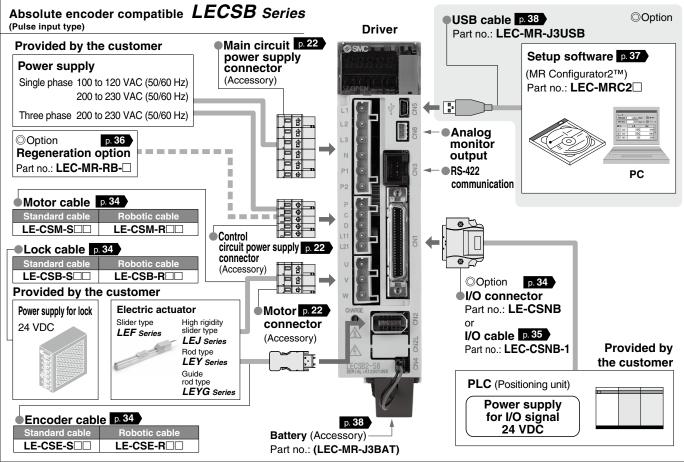


© SMC

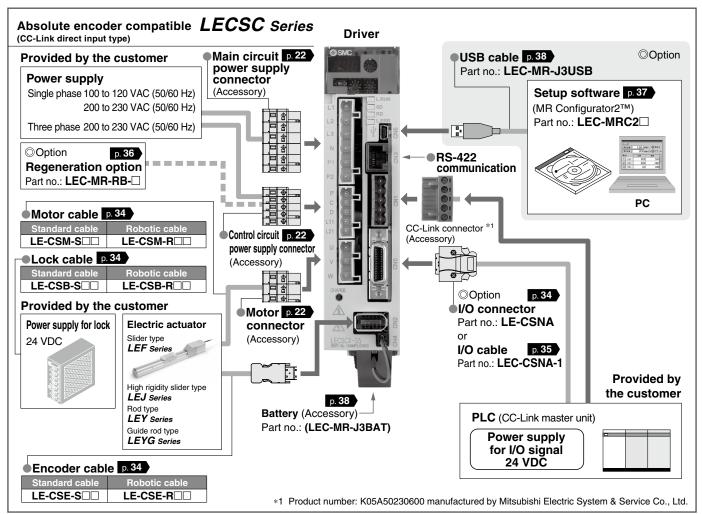


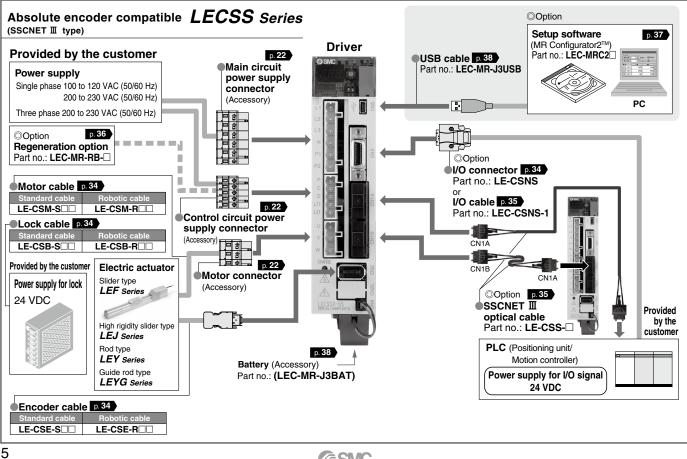


SMC

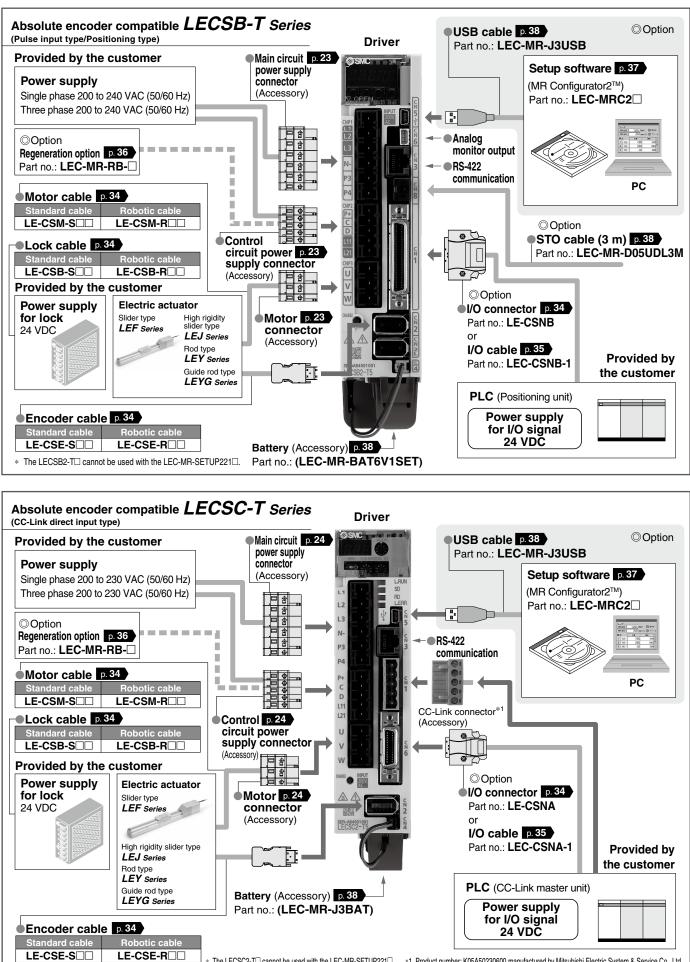


* The LECSC2-T

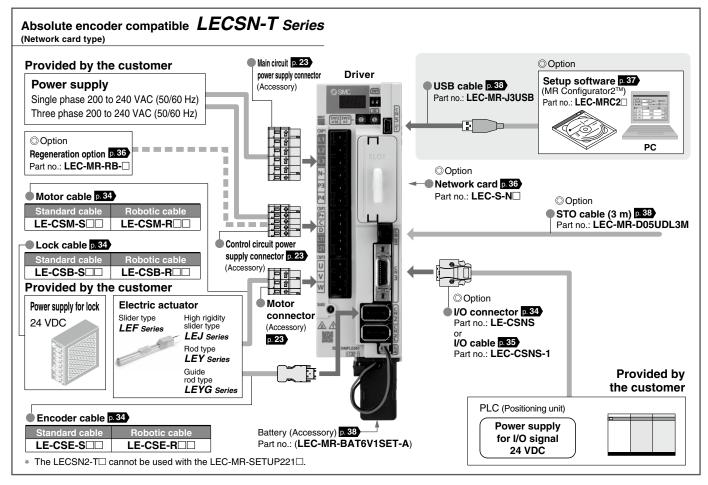


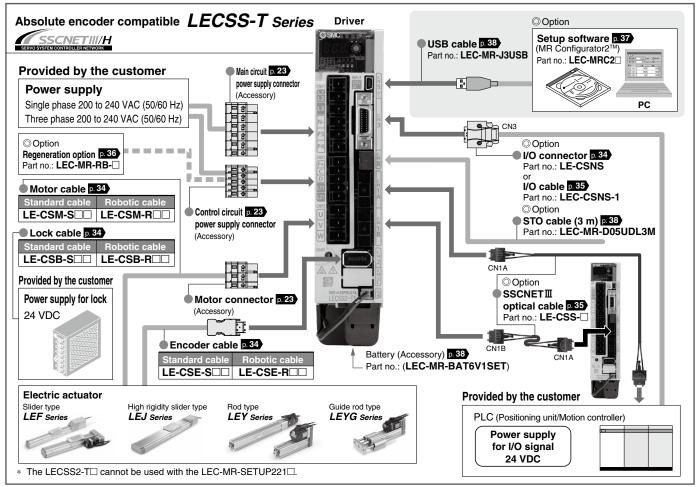

SMC

7

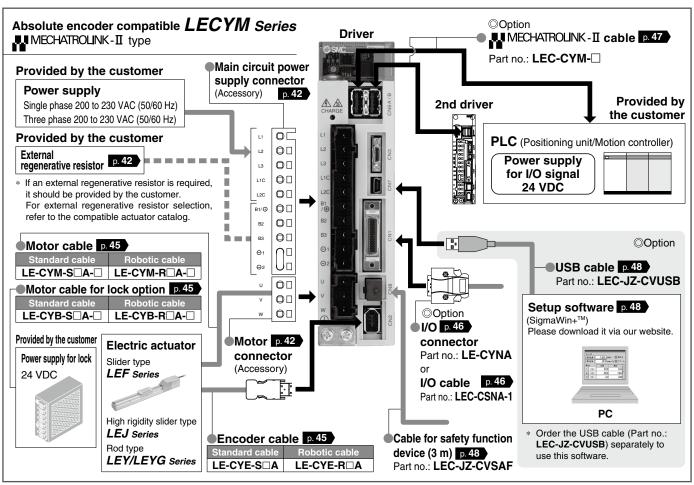

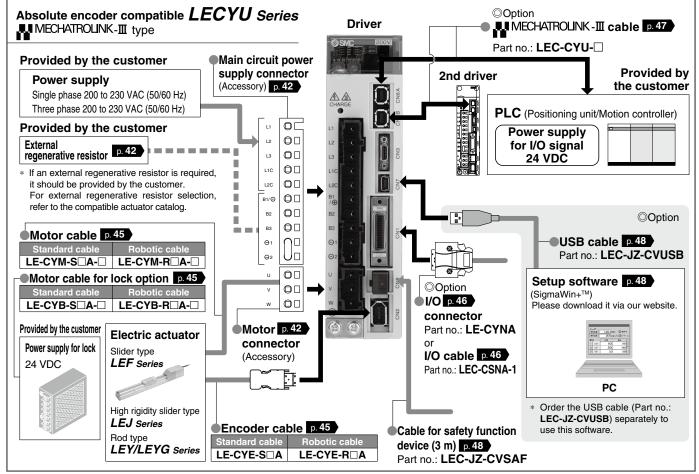

AC Servo Motor Driver

Motor capacity

100/200/400 W

CC-Link

LECSA Series (Pulse input type/Positioning type)

Incremental Type

Absolute Type

- Up to 7 positioning points by point table
- Input type: Pulse input
- Control encoder: Incremental 17-bit encoder (Resolution: 131072 p/rev)
- Parallel input: 6 inputs output: 4 outputs

LECSB Series (Pulse input type)



- Input type: Pulse input
- Control encoder: Absolute 18-bit encoder (Resolution: 262144 p/rev)
- Parallel input: 10 inputs
 output: 6 outputs

LECSC Series (CC-Link direct input type)



- Position data/speed data setting and operation start/stop
- Positioning by up to 255 point tables (when 2 stations are occupied)
- Up to 32 drivers can be connected (when 2 stations are occupied) with CC-Link communication.
- Applicable Fieldbus protocol: CC-Link (Ver. 1.10, Max. communication speed: 10 Mbps)
- Control encoder: Absolute 18-bit encoder (Resolution: 262144 p/rev)

LECSS Series (SSCNET II type)



- Compatible with Mitsubishi Electric's servo system controller network
- Reduced wiring and SSCNET II optical cable for one-touch connection
- The SSCNET II optical cable provides enhanced noise resistance.
- \bullet Up to 16 drivers can be connected with SSCNET ${\rm I\!I}$ communication.
- Applicable Fieldbus protocol: SSCNET II (High-speed optical communication, Max. bidirectional communication speed: 50 Mbps)
- Control encoder: Absolute 18-bit encoder (Resolution: 262144 p/rev)




Power supply voltage

Motor capacity

200 to 240 VAC (LECSC-T Series: 200 to 230 VAC 100/200/400 W

CC-Link



- Input type: Pulse input (Sink (NPN) type interface/Source (PNP) type interface)
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)
- STO (Safe Torque Off) safety function available
- Parallel input: 10 inputs output: 6 outputs

LECSC-T Series (CC-Link direct input type)



- Position data/speed data setting and operation start/stop
- Positioning by up to 255 point tables (when 2 stations are occupied)
- Up to 32 drivers can be connected (when 2 stations are occupied) with CC-Link communication.
- Applicable Fieldbus protocol: CC-Link (Ver. 1.10, Max. communication speed: 10 Mbps)
- Control encoder: Absolute 18-bit encoder (Resolution: 262144 p/rev)

LECSN-T Series (Network card type)



- Supports NETT, Ether CAT, and Ether Vet/IP
- Supports 3 types of network card (PROFINET, EtherCAT, and EtherNet/IP™)
- STO (Safe Torque Off) safety function available
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)

LECSS-T Series (SSCNET II/H type)



- Applicable Fieldbus protocol:
 SSCNETINH
 SERVO SYSTEM CONTROLLER NETWORK
 (High-speed optical communication, max. bidirectional communication speed: 150 Mbps)
- Bidirectional communication speed: 3 times
- SSCNET II/H and SSCNET II products are compatible.
- Improved noise resistance
- STO (Safe Torque Off) safety function available
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)



Motor capacity

200 to 230 VAC

100/200/400 W

MECHATROLINK-III

LECYM Series (MECHATROLINK-II type) MECHATROLINK-II • Applicable Fieldbus protocol: MECHATROLINK-II • Number of connectable drivers: 30 units (Transmission distance: Max. 50 m in total) • Max. transmission speed: 10 Mbps • Min. transmission cycle: 250 μs • Control encoder: Absolute 20-bit encoder (Resolution: 1048576 p/rev) • STO (Safe Torque Off) safety function available

• Compliant with the SEMI F47 Standard (Torque limit for low DC power supply voltage for main circuit)

LECYU Series (MECHATROLINK-III type)



- Applicable Fieldbus protocol: MECHATROLINK-II
- Number of connectable drivers: 62 units (Transmission distance: Max. 75 m between stations)
- Max. transmission speed: 100 Mbps
- Min. transmission cycle: 125 µs
- Control encoder: Absolute 20-bit encoder (Resolution: 1048576 p/rev)
- STO (Safe Torque Off) safety function available
- Compliant with the SEMI F47 Standard (Torque limit for low DC power supply voltage for main circuit)

Absolute Type

CONTENTS

AC Servo Motor

Incremental Type/Absolute Type LECS // LECS -T Series




How to Order	3
Dimensions	4
Specifications	7
Power Supply Wiring Example	1
Control Signal Wiring Example	5
Options	4

AC Servo Motor MECHATROLINK Compatible Absolute Type LECY Series



How to Order p. 3	9
Dimensions	9
Specifications	0 🖵
Power Supply Wiring Examplep. 4	2
Control Signal Wiring Examplep. 4	3
Options	5



AC Servo Motor Driver Incremental Type CE

LECSA Series (Pulse Input Type/Positioning Type)

Absolute Type



LECSN-T (Network Card Type)/LECSS-T (SSCNET II/H Type) Series

Compatible motor type

How to Order

For LECSA/LECSB/LECSC/LECSS

For LECSB-T/LECSC-T/LECSS-T



LISTED

(RoHS)

		1		S1
	Driver type			
Α	Pulse input type/Positioning type (For incremental encoder)			
в	Pulse input type (For absolute encoder)			
С	CC-Link direct input type (For absolute encoder)			Com Symbo
s	SSCNET II type (For absolute encoder)			S1 S3
				64

Pulse input type/Positioning type

(For absolute encoder) CC-Link direct input type

(For absolute encoder) SSCNET II/H type

(For absolute encoder)

2

Power supply voltage
100 to 100 V/AC 50/00 Up

Driver type

Power supply voltage 200 to 240 VAC, 50/60 Hz (For LECSB2-T/LECSS2-T)

200 to 230 VAC, 50/60 Hz

(For LECSC2-T)

LECS B 2-T5

	100 to 120 VAC, 50/60 Hz
2	200 to 230 VAC, 50/60 Hz

* If an I/O connector is required, order the part number "LE-CSND" separately. If an I/O cable is required, order the part number "LEC-CSN□-1" separately. (Since the electric actuator will not operate without emergency stop (EMG) wiring for the LECSB, an I/O connector or an I/O cable is required.)

Symbol	Туре	Capacity	Encoder	
S1	AC servo motor (S2*1)	100 W		
S3 AC servo motor (S3*1)		200 W	Incremental	
S4	AC servo motor (S4*1)*2	400 W		
S5	AC servo motor (S6*1)	100 W		
S7	AC servo motor (S7*1)	200 W	Absolute	
S8	AC servo motor (S8*1)*2	400 W		

*1 The symbol shows the motor type (actuator).

*2 Only available for power supply voltage "200 to 230 VAC"



LECSB-T LECSC-T LECSS-T

If an I/O connector is required, order the

- part number "LE-CSND" separately.
- If an I/O cable is required, order the part number "LEC-CSN□-1" separately. (Since the electric actuator will not operate without forced stop (EM2) wiring when using the LECSB-T

in any mode other than positioning mode, an I/O

• Compatible motor type connector or an I/O cable is required.)							
Symbol	Туре	Capacity	Encoder				
T5	AC servo motor (T6*1)	100 W					
T7	AC servo motor (T7*1)	200 W	Absolute				
T8	AC servo motor (T8*1)	400 W	Absolute				
Т9	AC servo motor (T9*1, *2)	750 W					

*1 The symbol shows the motor type (actuator).

*2 Only supports the pulse input type/positioning type driver type

For LECSN-T

в

С

S

			LECS	SN2-T	5-9
	N Network card type (For absolute encoder)				
			voltage● 60 Hz		
			Compati	ble motor type	
Symb	ol	Туре	Capacity	Encoder	
T5		AC servo motor (T6*1)	100 W		
T7		AC servo motor (T7*1)	200 W	Abaaluta	
Т8		AC servo motor (T8*1)	400 W	Absolute	

750 W

LECSN-T * If an I/O connector is required, order the part number "LE-CSNS" separately. If an I/O cable is required, order the part number "LEC-CSNS-1" separately.

Network card type*1

Nil	Without network card
E	EtherCAT
9	EtherNet/IP™
Р	PROFINET

*1 Only the "Without network card" option is UL compliant.

AC servo motor (T9*1) *1 The symbol shows the motor type (actuator).




Ś

Т٩

AC Servo Motor Driver LECS /LECS -T Series


Dimensions

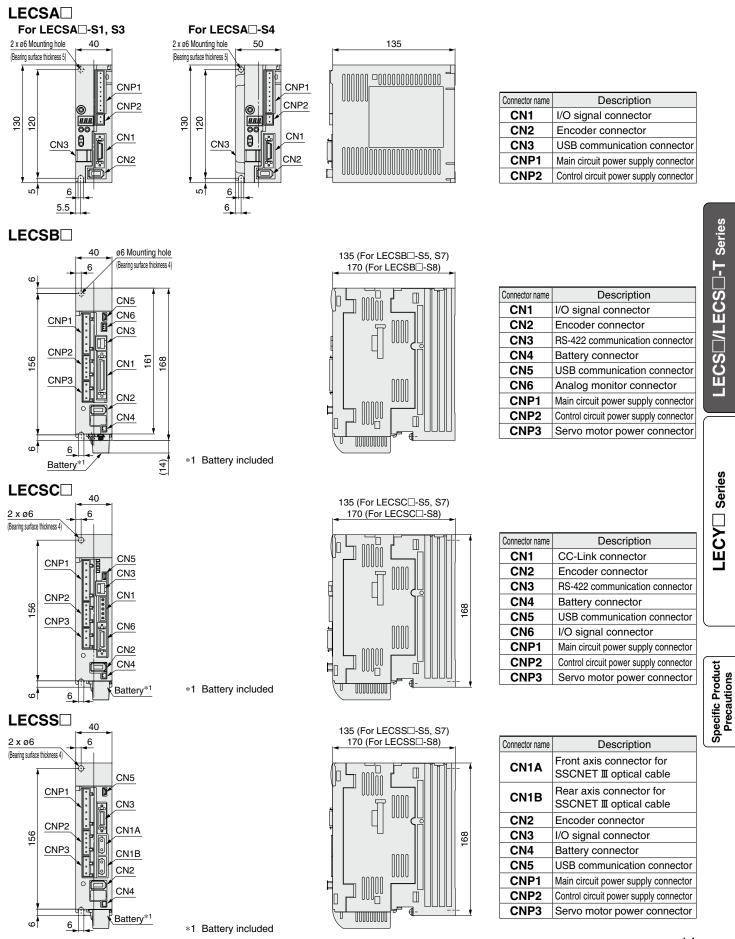

SMC

14

Dimensions

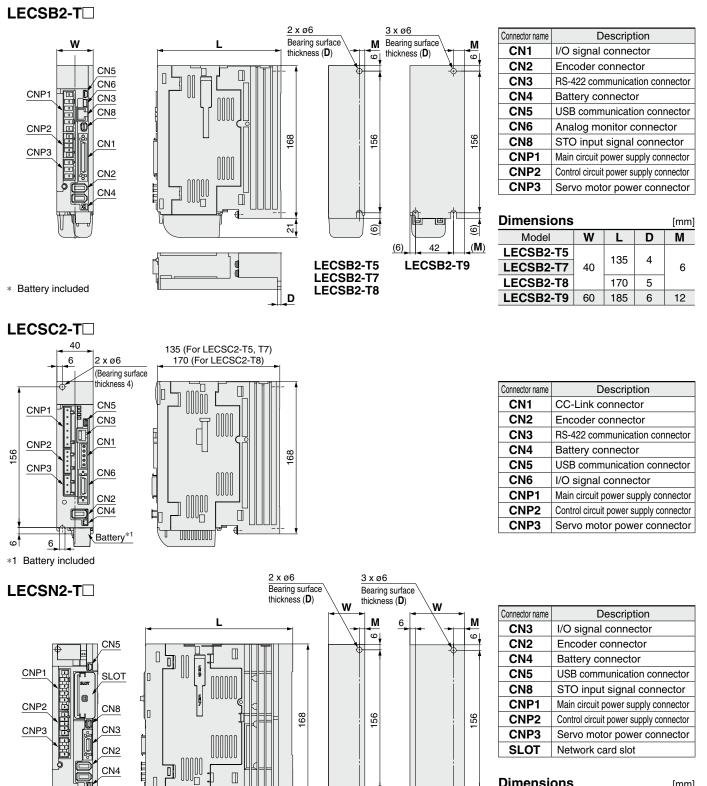

Dimensions				[mm]
Model	W	L	D	М
LECSN2-T5				
LECSN2-T7	50	161	5	6
LECSN2-T8				
LECSN2-T9	60	191	6	12

रेप प्रमुख

Battery*1



LECSN2-T5

LECSN2-T7

LECSN2-T8

(0)

(<u>0</u>

LECSN2-T9


ß

ю.

D

AC Servo Motor Driver $LECS \square / LECS \square - T$ Series

Dimensions

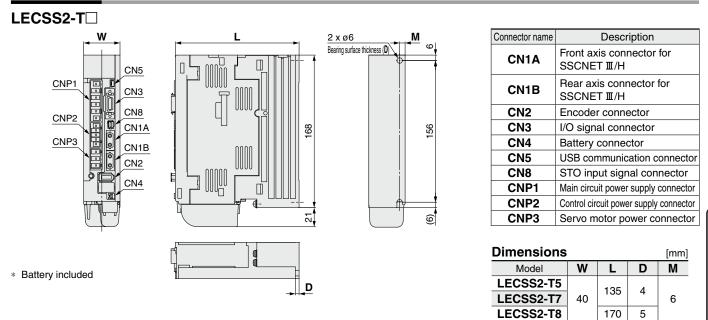

LECS // LECS - T Series

Specifications

LECSA Series

	Model	LECSA1-S1	LECSA1-S3	LECSA2-S1	LECSA2-S3	LECSA2-S4
Compatil	ble motor capacity [W]	100	200	100	200	400
Compati	ble encoder		Incremental 17-bi	t encoder (Resoluti	on: 131072 p/rev)	•
Main	Power voltage [V]	Single phase 100 to	120 VAC (50/60 Hz)	Single pha	se 200 to 230 VAC	(50/60 Hz)
power	Allowable voltage fluctuation [V]	Single phase	85 to 132 VAC	Sing	e phase 170 to 253	VAC
supply	Rated current [A]	3.0	5.0	1.5	2.4	4.5
Control	Control power supply voltage [V]			24 VDC		
power	Allowable voltage fluctuation [V]			21.6 to 26.4 VDC		
supply	Rated current [A]			0.5		
Parallel i	nput			6 inputs		
Parallel o	output	4 outputs				
Max. inp	ut pulse frequency [pps]	1 M (for differential receiver), 200 k (for open collector)*2				
	In-position range setting [pulse]	0 to ±65535 (Command pulse unit)				
	Error excessive			±3 rotations		
Function	Torque limit	Parameter setting				
	Communication	USB communication				
	Point table	Up to 7 points				
Operatin	g temperature range [°C]	0 to 55 (No freezing)				
Operating humidity range [%RH]		90 or less (No condensation)				
Storage temperature range [°C]		-20 to 65 (No freezing)				
Storage humidity range [%RH]		90 or less (No condensation)				
Insulatio	n resistance [MΩ]	Between the housing and SG: 10 (500 VDC)				
Weight [g]		60	00	· · · · ·	700

LECSB Series

	Model	LECSB1-S5	LECSB1-S7	LECSB2-S5	LECSB2-S7	LECSB2-S8
Compati	ble motor capacity [W]	100	200	100	200	400
Compati	ble encoder		Absolute 18-bit	encoder (Resolutio	n: 262144 p/rev)	
Main	Power voltage [V]	Single phase 100 to	120 VAC (50/60 Hz)	Three phase 200 to 230 VAC (50/60 Hz) Single phase 200 to 230 VAC (50/60 Hz)		
power supply	Allowable voltage fluctuation [V]	Single phase 8	35 to 132 VAC	Three phase 170 to 253 VAC Single phase 170 to 253 VAC		
	Rated current [A]	3.0	5.0	0.9	1.5	2.6
Control	Control power supply voltage [V]	Single phase 100 to	120 VAC (50/60 Hz)	Single pha	ase 200 to 230 VAC	(50/60 Hz)
power	Allowable voltage fluctuation [V]	Single phase 8	35 to 132 VAC	Single phase 170 to 253 VAC		
supply Rated current [A]		0.4		0.2		
Parallel i	nput	10 inputs				
Parallel o	output	6 outputs				
Max. inp	ut pulse frequency [pps]	1 M (for differential receiver), 200 k (for open collector)*2				
	In-position range setting [pulse]	0 to ±10000 (Command pulse unit)				
Function	Error excessive	±3 rotations				
	Torque limit	Parameter setting or external analog input setting (0 to 10 VDC)				
	Communication	USB communication, RS422 communication ^{*1}				
Operatin	g temperature range [°C]	0 to 55 (No freezing)				
Operatin	g humidity range [%RH]	90 or less (No condensation)				
Storage	temperature range [°C]	-20 to 65 (No freezing)				
Storage humidity range [%RH]		90 or less (No condensation)				
Insulatio	n resistance [M Ω]	Between the housing and SG: 10 (500 VDC)				
Weight [g	g]		80	00		1000

*1 USB communication and RS422 communication cannot be performed at the same time.

*2 If the command pulse input is open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.

Specifications

	Model			LECSC1-S7	LECSC2-S5	LECSC2-S7	LECSC2-S8
Compatible motor capacity [W]			100	200	100	200	400
Compatib	le encoder			Absolute 18-bit	encoder (Resolutio	n: 262144 p/rev)	
Main	Power volta	ge [V]	Single phase 1 (50/6	00 to 120 VAC 0 Hz)		se 200 to 230 VAC se 200 to 230 VAC	· /
power supply	Allowable v	oltage fluctuation [V]	Single phase 8	85 to 132 VAC		e phase 170 to 253 e phase 170 to 253	
	Rated curre	nt [A]	3.0	5.0	0.9	1.5	2.6
Control power	Control pow	ver supply voltage [V]	Single phase 1 (50/6	00 to 120 VAC 0 Hz)	Singl	e phase 200 to 230 (50/60 Hz)	VAC
supply	Allowable v	oltage fluctuation [V]	Single phase 8	85 to 132 VAC	Singl	e phase 170 to 253	3 VAC
	Rated curre	nt [A]	0	.4		0.2	
	Applicable F	ieldbus protocol (Version)		CC-Link	communication (V	er. 1.10)	
Communication specifications	Connection	cable	CC-Link	Ver. 1.10 complia	nt cable (Shielded	3-core twisted pair	cable)*1
	Remote station number				1 to 64		
	Cable length	Communication speed [bps]/ Maximum overall cable length [m]	16 k/1200, 625 k/900, 2.5 M/400, 5 M/160, 10 M/100			M/160, 10 M/100	
	longui	Cable length between stations [m]			0.2 or more		
	I/O occupation area (Inputs/Outputs)		1 station occupied (Remote I/O 32 points/32 points)/(Remote register 4 words/4 words) 2 stations occupied (Remote I/O 64 points/64 points)/(Remote register 8 words/8 words)				
	Number of c	connectable drivers	Up to 42 (when 1 station is occupied by 1 driver), Up to 32 (when 2 stations are occupied by 1 driver), when there are only remote device stations.				
	Remote reg	ister input	Available with CC-Link communication (2 stations occupied)				
Command method	Point table No. input		Available with CC-Link communication, RS422 communication CC-Link communication (1 station occupied): 31 points CC-Link communication (2 stations occupied): 255 points RS422 communication: 255 points				
	Indexer pos	itioning input	Available with CC-Link communication CC-Link communication (1 station occupied): 31 points CC-Link communication (2 stations occupied): 255 points				
Communi	ication functi	on	USB communication, RS-422 communication*2				
Operating	g temperature	e range [°C]	0 to 55 (No freezing)				
Operating	g humidity ra	nge [%RH]	90 or less (No condensation)				
Storage temperature range [°C]			-20 to 65 (No freezing)				
Storage h	numidity rang	e [%RH]	90 or less (No condensation)				
Insulation resistance [M Ω]			Between the housing and SG: 10 (500 VDC)				
Insulatior	i resistance [MIS2]		Detween the	nousing and OG.	0 (000 100)	

*1 If the system comprises of both CC-Link Ver. 1.00 and Ver. 1.10 compliant cables, Ver. 1.00 specifications are applied to the overall cable length and the cable length between stations.
*2 USB communication and RS422 communication cannot be performed at the same time.

LECSS Series

	Model	LECSS1-S5	LECSS1-S7	LECSS2-S5	LECSS2-S7	LECSS2-S8
Compatil	ble motor capacity [W]	100	200	100	200	400
Compatil	ble encoder		Absolute 18-bit	encoder (Resolutio	n: 262144 p/rev)	
Main	Power voltage [V]	Single phase 100 to 120 VAC (50/60 Hz)		Three phase 200 to 230 VAC (50/60 Hz) Single phase 200 to 230 VAC (50/60 Hz)		` '
power supply	Allowable voltage fluctuation [V]	Single phase 85 to 132 VAC		Three phase 170 to 253 VAC Single phase 170 to 253 VAC		
	Rated current [A]	3.0	5.0	0.9	1.5	2.6
Control	Control power supply voltage [V]	Single phase 100 to 120 VAC (50/60 Hz)		Single phase 200 to 230 VAC (50/60 Hz)		
power supply	Allowable voltage fluctuation [V]	Single phase 85 to 132 VAC		Single phase 170 to 253 VAC		
	Rated current [A]	0.4		0.2		
Applicab	le Fieldbus protocol	SSCNET II (High-speed optical communication)				
Commun	nication function	USB communication				
Operatin	g temperature range [°C]	0 to 55 (No freezing)				
Operatin	g humidity range [%RH]	90 or less (No condensation)				
Storage	temperature range [°C]	-20 to 65 (No freezing)				
Storage	humidity range [%RH]	90 or less (No condensation)				
Insulatio	n resistance [M Ω]	Between the housing and SG: 10 (500 VDC)				
Weight [g]		80	00		1000

Specifications

LECSB-T Series

	Model	LECSB2-T5	LECSB2-T7	LECSB2-T8	LECSB2-T9		
Compati	ble motor capacity [W]	100	200	400	750		
Compati	ble encoder	Ab	solute 22-bit encoder (F	Resolution: 4194304 p/re	ev)		
Main	Power voltage [V]	Three phase 200	Three phase 200 to 240 VAC (50/60 Hz), Single phase 200 to 240 VAC (50/60 Hz)				
power	Allowable voltage fluctuation [V]	Three phase 170	Three phase 170 to 264 VAC (50/60 Hz), Single phase 170 to 264 VAC (50/60 Hz)				
supply	Rated current [A]	0.9	1.5	2.6	3.8		
Control	Control power supply voltage [V]		Single phase 200 to	240 VAC (50/60 Hz)			
power	Allowable voltage fluctuation [V]		Single phase 1	70 to 264 VAC			
supply	Rated current [A]		0	.2			
Parallel i	nput		10 ir	iputs			
Parallel output			6 outputs				
Max. inp	ut pulse frequency [pps]	4 M (for differential receiver), 200 k (for open collector)					
	In-position range setting [pulse]	0 to ±65535 (Command pulse unit)					
	Error excessive	±3 rotations					
Function	Torque limit	Parameter setting or external analog input setting (0 to 10 VDC)					
unction	Communication		USB communication, R	S422 communication*1			
	Point table		Up to 25	5 points			
	Pushing operation		Point table no. input me	ethod, Up to 127 points			
Operatin	g temperature range [°C]	0 to 55 (No freezing)					
Operatin	g humidity range [%RH]	RH] 90 or less (No condensation)					
Storage	temperature range [°C]	-20 to 65 (No freezing)					
Storage	humidity range [%RH]	90 or less (No condensation)					
Insulatio	n resistance [M Ω]	Between the housing and SG: 10 (500 VDC)					
Weight [g]	80	00	1000	1400		

*1 USB communication and RS422 communication cannot be performed at the same time.

LECSC-T Series

	Mo	odel	LECSC2-T5	LECSC2-T7	LECSC2-T8		
Compatib	ole motor cap	acity [W]	100	100 200 400			
Compatib	ole encoder		Absolute 18-bit encoder (Resolution: 262144 p/rev)				
Main	ain Power voltage [V]		Three phase 200 to 230 \	AC (50/60 Hz), Single phase 2	00 to 230 VAC (50/60 Hz)		
power	Allowable voltage fluctuation [V]		Three phase 1	70 to 253 VAC, Single phase 1	70 to 253 VAC		
supply	Rated curre	nt [A]	0.9	1.5	2.6		
Control	Control pow	ver supply voltage [V]	Sing	le phase 200 to 230 VAC (50/60) Hz)		
power	Allowable vo	oltage fluctuation [V]		Single phase 170 to 253 VAC			
supply	Rated curre	nt [A]		0.2			
	Applicable Fi	ieldbus protocol (Version)	C	C-Link communication (Ver. 1.1	0)		
[Connection	cable	CC-Link Ver. 1.10 cc	ompliant cable (Shielded 3-core	twisted pair cable)*1		
	Remote stat	ion number		1 to 64			
	Cable length	Communication speed [bps]/ Maximum overall cable length [m]	16 k/1200,	, 10 M/100			
	length	Cable length between stations [m]	0.2 or more				
	I/O occupation area (Inputs/Outputs)		1 station occupied (Remote I/O 32 points/32 points)/(Remote register 4 words/4 words) 2 stations occupied (Remote I/O 64 points/64 points)/(Remote register 8 words/8 words)				
	Number of c	connectable drivers	Up to 42 (when 1 station is occupied by 1 driver), Up to 32 (when 2 stations are occupied by 1 driver), when there are only remote device stations				
	Remote regi	ister input	Available with CC-Link communication (2 stations occupied)				
Command method	Point table N	No. input	Available with CC-Link communication, RS422 communication CC-Link communication (1 station occupied): 31 points, CC-Link communication (2 stations occupied): 255 points RS422 communication: 255 points				
	Indexer positioning input		Available with CC-Link communication CC-Link communication (1 station occupied): 31 points, CC-Link communication (2 stations occupied): 255 points				
Commun	ication functi	on	USB communication, RS-422 communication*2				
Operating	g temperature	e range [°C]	0 to 55 (No freezing)				
Operating humidity range [%RH]		nge [%RH]	90 or less (No condensation)				
Storage t	emperature r	ange [°C]	-20 to 65 (No freezing)				
Storage h	numidity rang	je [%RH]	90 or less (No condensation)				
Insulation	n resistance [[ΜΩ]	Between the housing and SG: 10 (500 VDC)				
Weight [g]			80	00	1000		

*1 If the system comprises of both CC-Link Ver. 1.00 and Ver. 1.10 compliant cables, Ver. 1.00 specifications are applied to the overall cable length and the cable length between stations. *2 USB communication and RS422 communication cannot be performed at the same time.



AC Servo Motor Driver LECS /LECS -T Series

Specifications

	Model	LECSN2-T5	LECSN2-T7	LECSN2-T8	LECSN2-T9	
Compatil	ole motor capacity [W]	100	200	400	750	
Compatil	ble encoder	Ab	solute 22-bit encoder (F	Resolution: 4194304 p/r	ev)	
Main power supply	Power voltage [V]	Three phase 200	to 240 VAC (50/60 Hz),	Single phase 200 to 24	0 VAC (50/60 Hz)	
	Allowable voltage fluctuation [V]	Three phase 170	to 264 VAC (50/60 Hz),	Single phase 170 to 26	4 VAC (50/60 Hz)	
	Rated current [A]	0.9	1.5	2.6	3.8	
Control power supply	Control power supply voltage [V]		Single phase 200 to	240 VAC (50/60 Hz)		
	Allowable voltage fluctuation [V]	Single phase 170 to 264 VAC				
	Rated current [A]	0.2				
Applicab	le Fieldbus protocol	PROFINET, EtherCAT, EtherNet/IP™				
	Communication	USB communication				
Function	Point table*1		Up to 25	55 points		
Operating	g temperature range [°C]	0 to 55 (No freezing)				
Operating	g humidity range [%RH]	90 or less (No condensation)				
Storage temperature range [°C]		-20 to 65 (No freezing)				
Storage humidity range [%RH]		90 or less (No condensation)				
Insulation resistance [MΩ]		Between the housing and SG: 10 (500 VDC)				
Weight [g	1	1000 1400				


*1 Only supports PROFINET and EtherCAT

LECSS-T Series

Model		LECSS2-T5	LECSS2-T7	LECSS2-T8		
Compati	ble motor capacity [W]	100	200	400		
Compati	ble encoder	Absolute 2	2-bit encoder (Resolution: 4194	1304 p/rev)		
Main	Power voltage [V]	Three phase 200 to 240 \	VAC (50/60 Hz), Single phase 2	00 to 240 VAC (50/60 Hz)		
power	Allowable voltage fluctuation [V]	Three phase 170 to 264 \	/AC (50/60 Hz), Single phase 1	70 to 264 VAC (50/60 Hz)		
supply	Rated current [A]	0.9	1.5	2.6		
Control	Control power supply voltage [V]	Sing	le phase 200 to 240 VAC (50/60) Hz)		
power	Allowable voltage fluctuation [V]	Single phase 170 to 264 VAC				
supply	Rated current [A]	0.2				
Applicat	ole Fieldbus protocol	SSCNET II/H (High-speed optical communication)				
Commur	nication function	USB communication				
Operatin	ng temperature range [°C]	0 to 55 (No freezing)				
Operatin	ng humidity range [%RH]	90 or less (No condensation)				
Storage	temperature range [°C]	-20 to 65 (No freezing)				
Storage	humidity range [%RH]	90 or less (No condensation)				
Insulatio	on resistance [M Ω]	Between the housing and SG: 10 (500 VDC)				
Weight [g]	80	00	1000		


Power Supply Wiring Example: LECSA

LECSA -----

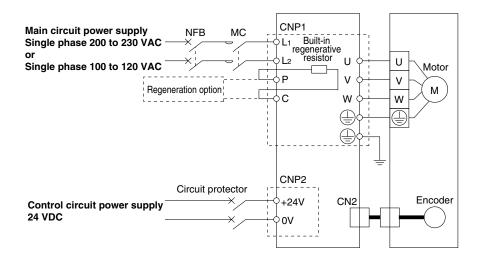

Main Circuit Power Supply Connector: CNP1 * Accessory


Terminal name	Function	Details	
	Protective earth (PE)	Should be grounded by connecting the servo motor's earth terminal and the control panel's protective earth (PE)	
L1	Main circuit	Connect the main circuit power supply. LECSA1: Single phase 100 to 120 VAC, 50/60 Hz	
L2	power supply	LECSA2: Single phase 200 to 230 VAC, 50/60 Hz	
Р	Regeneration option	Terminal to connect regeneration option LECSA - S1: Not connected at time of shipping LECSA - S3, S4: Connected at time of shipping	
с		 If regeneration option is required for "Model Selection," connect to this terminal. 	
U	Servo motor power (U)		
V	Servo motor power (V)	Connect to motor cable (U, V, W).	
W	Servo motor power (W)		

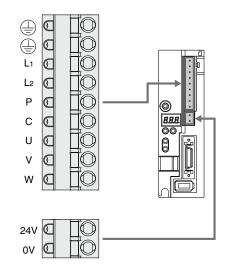

Control Circuit Power Supply Connector: CNP2 * Accessory

Terminal name	Function	Details
24V	Control circuit power supply (24 V)	24 V side of the control circuit power supply (24 VDC) supplied to the driver
0V	Control circuit power supply (0 V)	0 V side of the control circuit power supply (24 VDC) supplied to the driver


Power Supply Wiring Example: LECSB, LECSC, LECSS

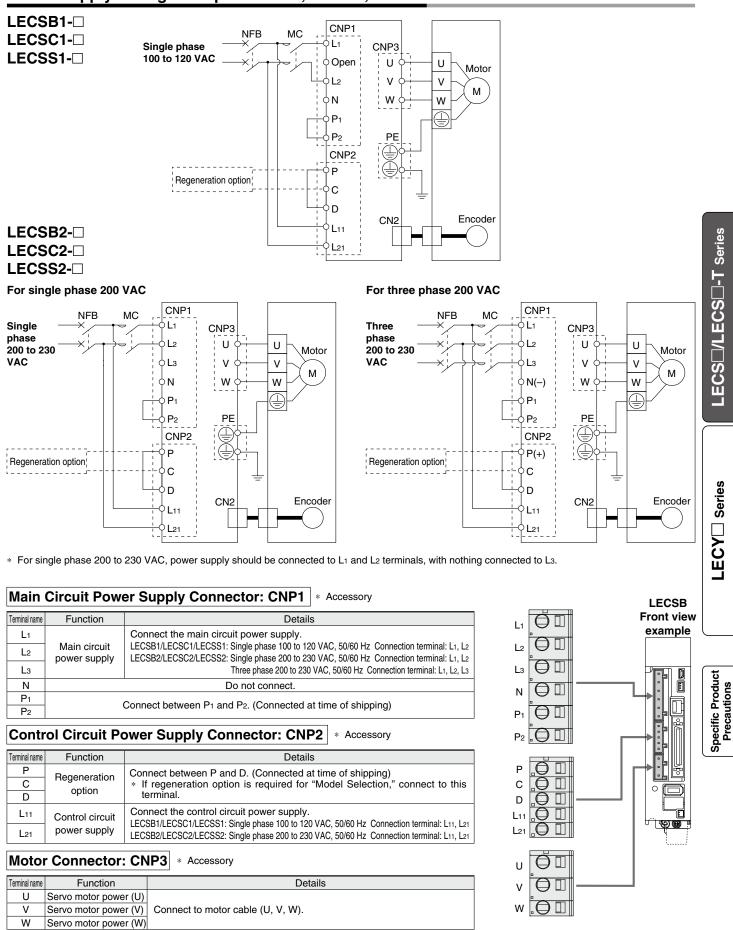


Power Supply Wiring Example: LECSB2-T□, LECSS2-T□, LECSN2-T□

For single phase 200 VAC



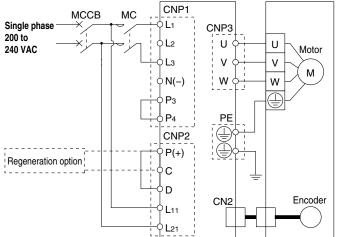

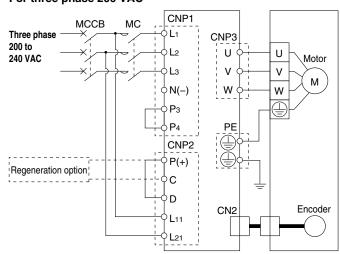

* For single phase 200 to 240 VAC, power supply should be connected to L1 and L3 terminals, with nothing connected to L2. Please note that the wiring locations differ from the LECS□.

Main Circuit Power Supply Connector: CNP1 * Accessory


Terminal name	Function	Details
L1		Connect the main circuit power supply.
L2	Main circuit	LECSB2-T/LECSS2-T/LECSN2-T:
	power supply	Single phase 200 to 240 VAC, 50/60 Hz Connection terminal: L1, L3
Lз		Three phase 200 to 240 VAC, 50/60 Hz Connection terminal: L1, L2, L3
N(-)		Do not connect.
P3		Connect between P3 and P4. (Connected at time of shipping)
P4		Connect between F3 and F4. (Connected at time of shipping)

Control Circuit Power Supply Connector: CNP2 * Accessory


Terminal name	Function	Details
P(+) C	Regeneration option	Connect between P(+) and D. (Connected at time of shipping) * If regeneration option is required for "Model Selection," connect to this terminal.
L11	Control circuit	Connect the control circuit power supply. LECSB2-T/LECSS2-T/LECSN2-T:
L21	power supply	Single phase 200 to 240 VAC, 50/60 Hz Connection terminal: L11, L21

Motor Connector: CNP3 * Accessory

Terminal name	Function	Function Details						
U	Servo motor power (U)							
V	Servo motor power (V)	Connect to motor cable (U, V, W).						
W	Servo motor power (W)							
	· · · · ·							

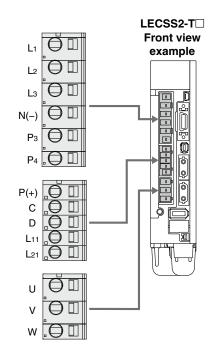

Power Supply Wiring Example: LECSC2-T□

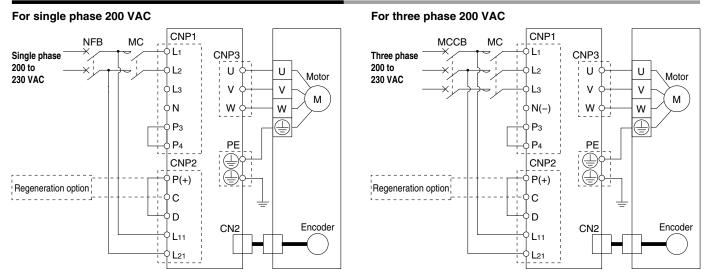

SMC

* For single phase 200 to 230 VAC, power supply should be connected to L1 and L2 terminals, with nothing connected to L3.

Main Circuit Power Supply Connector: CNP1 * Accessory


Terminal name	Function Details						
L1	Main circuit power supply	Connect the main circuit power supply.					
L2		LECSC2-T: Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2					
L3		Three phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2, L3					
Ν	Do not connect.						
Рз		Connect between Ba and B4 (Connected at time of chipping)					
P4	Connect between P ₃ and P ₄ . (Connected at time of shipping)						

Control Circuit Power Supply Connector: CNP2 * Accessory

Terminal name	Function	Details			
P(+)	Regeneration option	Connect between P and D. (Connected at time of shipping)			
С		* If regeneration option is required for "Model Selection," connect to this terminal.			
D	option				
L11	Control circuit	Connect the control circuit power supply.			
L21	power supply	LECSC2-T: Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L11, L21			

Motor Connector: CNP3 * Accessory

Terminal name	Function	Details
U	Servo motor power (U)	
V	Servo motor power (V)	Connect to motor cable (U, V, W).
W	Servo motor power (W)	

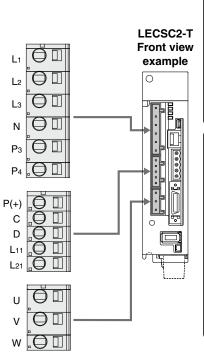

Specific Product Precautions


LECY Series

LECS_/LECS_-T Series

Control Signal Wiring Example: LECSA

LECSA ----

This wiring example shows connection with a PLC (FX3U-DMT/ES) manufactured by Mitsubishi Electric Corporation as when used in position control mode. Refer to the LECSA series Operation Manual and any technical literature or operation manuals for your PLC and positioning unit before connecting to another PLC or positioning unit.

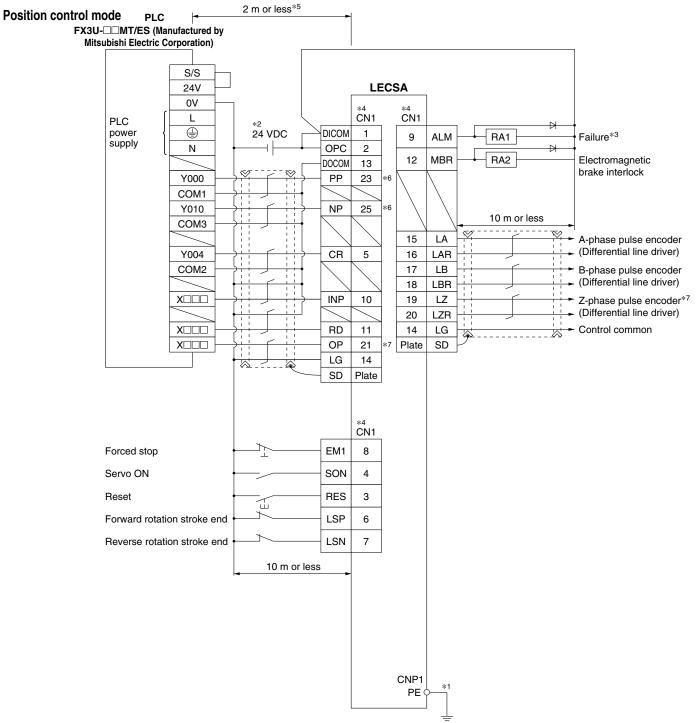


- *1 For preventing electric shock, be sure to connect the driver main circuit power supply connector (CNP1)'s protective earth (PE) terminal (marked) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC ±10% 200 mA using an external source. 200 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity. Refer to the Operation Manual for required current for interface.
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.
- *4 Signals of the same name are connected inside the driver.
- *5 For command pulse input with an open collector method. When a positioning unit loaded with a differential line driver method is used, it is 10 m or less.
- *6 If the command pulse input is open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.
- *7 The Z-phase pulse encoder corresponds to the differential line driver method and the open collector method. If the Z-phase pulse encoder is using the open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.

Control Signal Wiring Example: LECSA

In this wiring example, the device of the CN1-10 pin in the initial status has been changed to the device shown below. For details on the device and changing method, refer to the LECSA series Operation Manual. CN1-10: MEND (Travel completion)


Positioning mode (Point table method) For sink (NPN) I/O interface

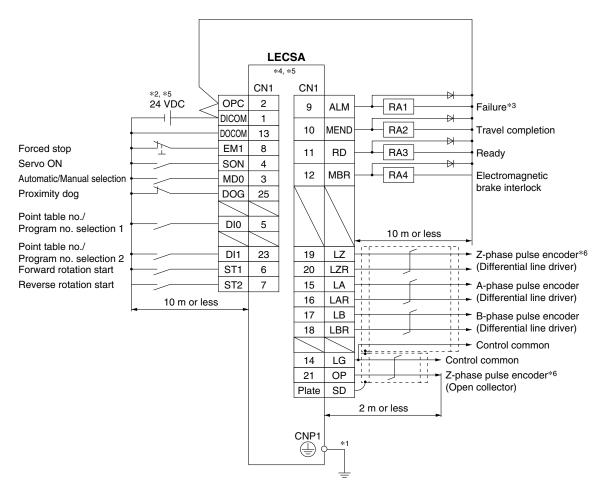

- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC ±10% 200 mA using an external source. 200 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- *3 The failure (ALM) is normally ON.
- *4 Signals of the same name are connected inside the driver.
- *5 The wiring example is for the sink (NPN) type interface. Refer to the LECSA series Operation Manual for the source (PNP) type interface. Note that the 23 pin and 25 pin cannot be used for the source type interface.
- *6 The Z-phase pulse encoder corresponds to the differential line driver method and the open collector method. If the Z-phase pulse encoder is using the open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.

Control Signal Wiring Example: LECSB

This wiring example shows connection with a positioning unit (QD75D) manufactured by Mitsubishi Electric Corporation as when used in position control mode. Refer to the LECSB series Operation Manual and any technical literature or operation manuals for your PLC and positioning unit before connecting to another PLC or positioning unit.

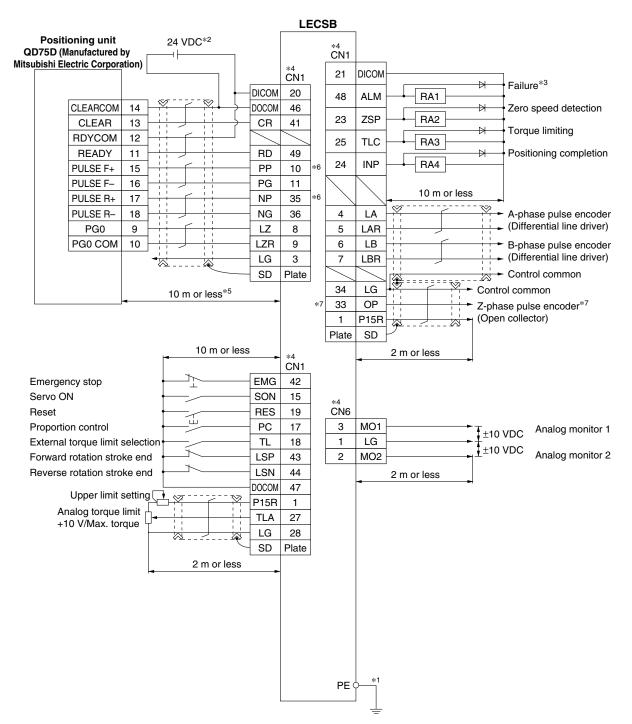

*1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🏵) to the control panel's protective earth (PE).

*2 For interface use, supply 24 VDC $\pm 10\%$ 300 mA using an external source.


*3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.

*4 Signals of the same name are connected inside the driver.

*5 For command pulse input with a differential line driver method. For open collector method, it is 2 m or less.


- *6 If the command pulse input is open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.
- *7 The Z-phase pulse encoder corresponds to the differential line driver method and the open collector method. If the Z-phase pulse encoder is using the open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.

Control Signal Wiring Example: LECSC, LECSC2-T

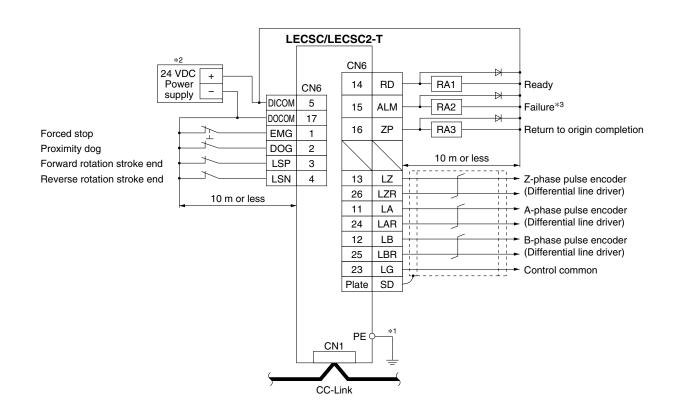

- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🏐) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC $\pm10\%$ 150 mA using an external source.
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.

Control Signal Wiring Example: LECSS

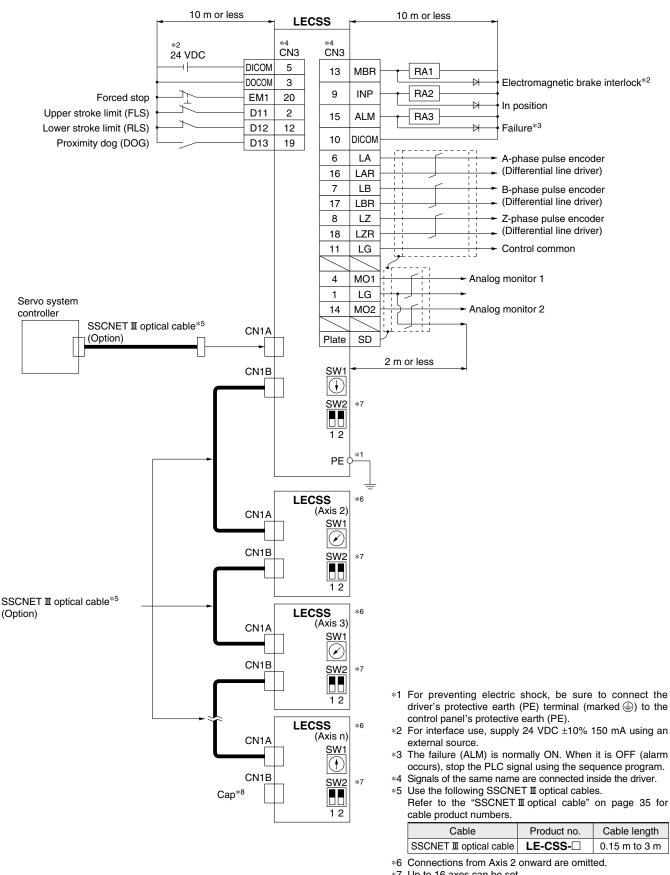


- *7 Up to 16 axes can be set.
- *8 Be sure to place a cap on unused CN1A/CN1B.

Control Signal Wiring Example: LECSB2-T

This wiring example shows connection with a positioning unit (QD75D) manufactured by Mitsubishi Electric Corporation as when used in position control mode. Refer to the LECSB2-T series Operation Manual and any technical literature or operation manuals for your PLC and positioning unit before connecting to another PLC or positioning unit.

Position control mode For sink (NPN) I/O interface

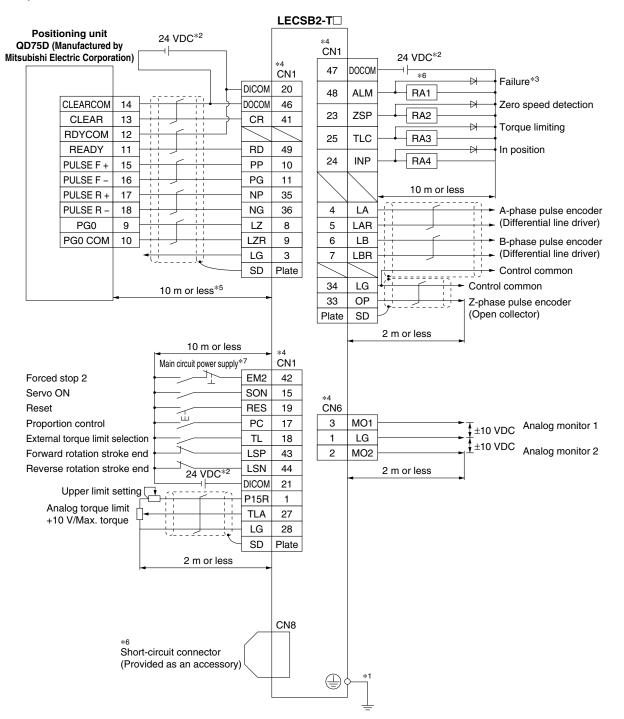


- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🍚) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC ±10% using an external source. Set the total current capacity to 500 mA. 500 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.
- *4 Signals of the same name are connected inside the driver.
- *5 For command pulse input with a differential line driver method. For open collector method, it is 2 m or less.
- *6 When not using the STO function, use the driver with the short-circuit connector (provided as an accessory) inserted.
- *7 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.

Control Signal Wiring Example: LECSB2-T

In this wiring example, the devices of the CN1-22 pin, CN1-23 pin, and CN1-25 pin in the initial status have been changed to the devices shown below. For details on the devices and changing method, refer to the LECSB2-T series Operation Manual. CN1-22: CPO (Rough match)/CN1-23: ZP (Return to origin completion)/CN1-25: MEND (Travel completion)

Positioning mode (Point table method) For sink (NPN) I/O interface

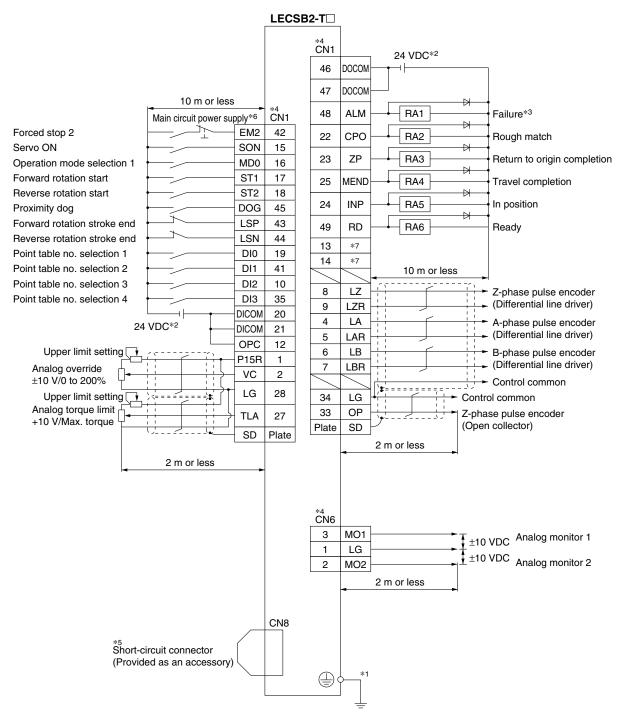

*1 For preventing electric shock, be sure to connect the servo amplifier's protective earth (PE) terminal (marked) to the control panel's protective earth (PE).

- *3 The ALM (Failure) is normally ON. (Normally closed contact)
- *4 Signals of the same name are connected inside the servo amplifier.


- *6 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.
- *7 Output devices are not assigned in the initial status. Assign the output devices as necessary.



^{*2} For interface use, supply 24 VDC ±10% using an external source. Set the total current capacity to 500 mA. 500 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.


^{*5} When not using the STO function, use the servo amplifier with the short-circuit connector (provided as an accessory) inserted.

Control Signal Wiring Example: LECSN2-T

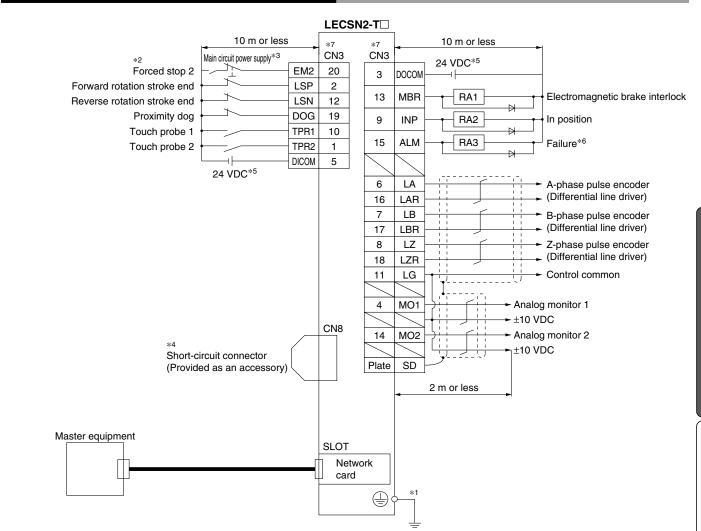


- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked) to the control panel's protective earth (PE).
- *2 If the master equipment does not have forced stop function, always install the forced stop 2 switch (normally closed contact).
- *3 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.
- *4 When not using the STO function, use the driver with the short-circuit connector (provided as an accessory) inserted.
- *5 For interface use, supply 24 VDC ±10% using an external source. Set the total current capacity to 300 mA. 300 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- *6 The ALM (Failure) is normally ON. (Normally closed contact)
- *7 Signals of the same name are connected inside the driver.

Control Signal Wiring Example: LECSS2-T

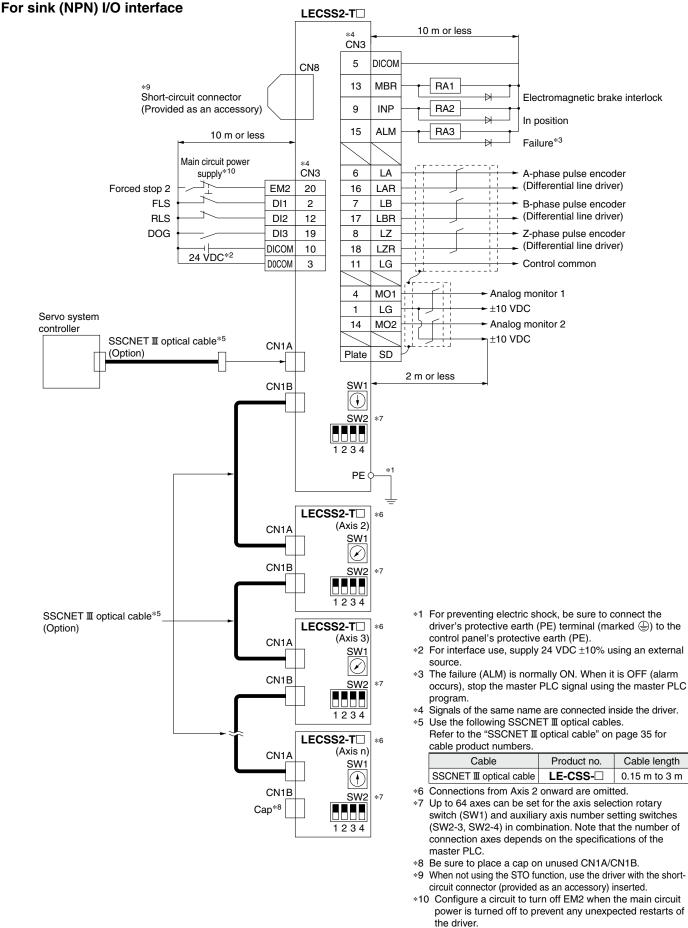

Options

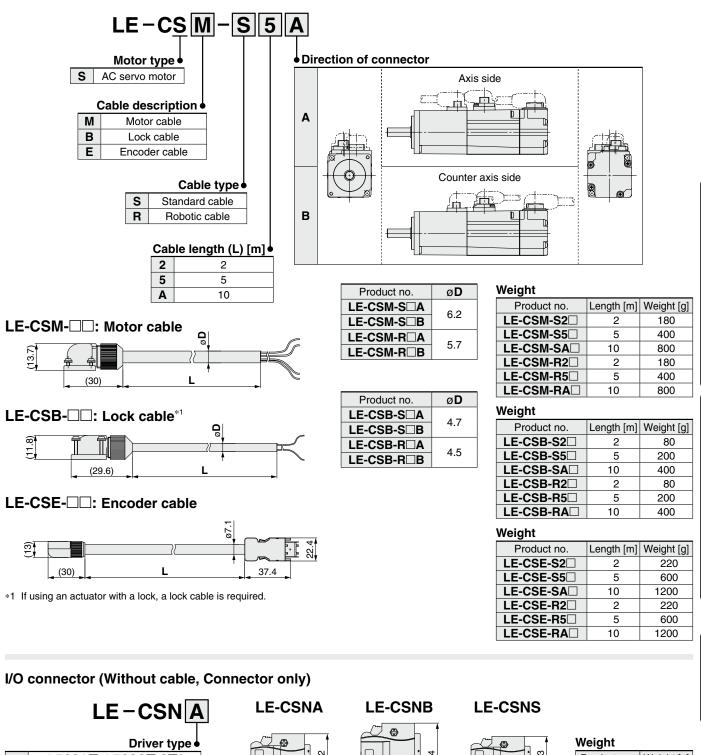

Motor cable, Lock cable, Encoder cable (LECS, LECS-T common)

LE-CSNA: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent LE-CSNB: 10150-3000PE (connector)/10350-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent LE-CSNS: 10120-3000PE (connector)/10320-52F0-008 (shell kit)

manufactured by 3M Japan Limited or equivalent



37.

SMC

0

39



* Applicable conductor size: AWG24 to 30

If using the LECSB, emergency stop (EMG) wiring is required in all cases. If using the LECSB-T in any mode other than positioning mode, forced stop (EM2) wiring is required in all cases. (The electric actuator will not operate without the wiring.)

33.

m

39

Prepare an I/O connector or an I/O cable in advance.


ECY Series

16

LECSA, LECSC-S/ Α LECSC2-T В LECSB -S /LECSB2-T LECSN2-T□, S LECSS -S /LECSS2-T

Options

SSCNET III optical cable (LECSS□-S□, LECSS2-T□)

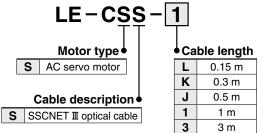


∗ LE-CSS-□ is MR-J3BUS□M

manufactured by Mitsubishi Electric Corporation.

Weight

noight							
Product no.	Length [m]	Weight [g]					
LE-CSS-L	0.15	100					
LE-CSS-K	0.3	100					
LE-CSS-J	0.5	200					
LE-CSS-1	1	200					
LE-CSS-3	3	200					

I/O cable

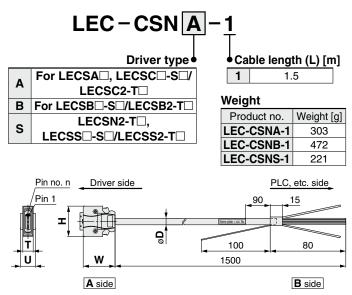

- * LEC-CSNA-1: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent LEC-CSNB-1: 10150-3000PE (connector)/10350-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent LEC-CSNS-1: 10120-3000PE (connector)/10320-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- * Conductor size: AWG24

 If using the LECSB, emergency stop (EMG) wiring is required in all cases. If using the LECSB-T in any mode other than positioning mode, forced stop (EM2) wiring is required in all cases. (The electric actuator will not operate without the wiring.)

Prepare an I/O connector or an I/O cable in advance.

Cable O.D.

Dimensions/Pin Nos.

Product no.	øD	Product no.	W	Н	Т	U	Pin no. n	
LEC-CSNA-1	11.1	LEC-CSNA-1		37.2		14	14	
LEC-CSNB-1	13.8	LEC-CSNB-1	39	52.4	12.7	18	26	
LEC-CSNS-1	9.1	LEC-CSNS-1		33.3		14	21	

Wiring

LEC-CSNA-1: Pin nos. 1 to 26 LEC-CSNB-1: Pin nos. 1 to 50 LEC-CSNS-1: Pin nos. 1 to 20

Connector pin no.		Pair no. of wire	Insulation color	Dot mark	Dot color	(
P	1				Red	
	2	1	Orange		Black	
	3	_	Light		Red	
	4	2	gray		Black	
	5		M/bite		Red	
	6	3	White		Black	
	7	4	Yellow		Red	
	8		reliow		Black	
A side	9	5	Pink		Red	
A S	10	5			Black	
	11	6	Orange		Red	
	12	0	Orange		Black	
	13	7	Light		Red	
	14		gray		Black	
	15	8	White		Red	
	16	°	vville		Black	
	17	9	Yellow		Red	
	18	9	Tenow		Black	


	nector 1 no.	Pair no. of wire	Insulation color	Dot mark	Dot color		nector n no.	Pair no. of wire	Insulation color	Dot mark	Dot color
	19	10	Pink		Red		35	18	White		Red
	20	10			Black		36		write		Black
	21	11	Orange		Red		37	19	Yellow		Red
	22	11	Orange		Black		38				Black
	23	12	Light		Red		39	20	Pink		Red
	24	12	gray		Black		40	20			Black
	25	13	White		Red		41	21	Orange		Red
side	26	15			Black	side	42				Black
A	27	14	Yellow		Red	AS	43	22	Light		Red
	28	14			Black		44		gray		Black
	29	15	Pink		Red		45	23	White		Red
	30	15			Black		46				Black
	31	16	Orange		Red		47	24	Yellow		Red
	32	10			Black		48				Black
	33	17	Light		Red		49	25	Pink		Red
	34		gray		Black		50	20			Black

AC Servo Motor Driver LECS /LECS -T Series

LEC-MR-RB-12

Options


Regeneration option (LECS common)



12 Allowable regenerative power 100 W

Confirm regeneration option to be used in "Model Selection."



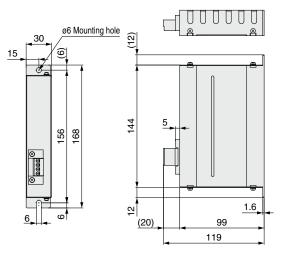

Weight

Product no. Weight [kg]			
LEC-MR-RB-032 0.5			
* MR-RB032 manufactured by Mitsubishi			
Electric Corporation			

Network card (LECSN2-T□)

LEC-S	- N9

	Network card type
N9	EtherNet/IP™
NE	EtherCAT
NP	PROFINET


00000 Π 40 ø6 Mounting hole 36 15 (9) ð∎ | \otimes \otimes 156 4 5 888 \otimes ⊗ 6 ശ ₽ 2 (20) 149 169

Weight			
Product no.	Weight [kg]		
LEC-MR-RB-12 1.1			
 MR-RB12 manufactu Electric Corporation 	red by Mitsubishi		

LEC-S-C common









Weight

 Product no.
 Weight [g]

 LEC-S 30

LECS_/LECS_-T Series

LECY Series

LECS /LECS -T Series

Options



Refer to Mitsubishi Electric Corporation's website for operating environment and version upgrade information.

MR Configurator2[™] is a registered trademark or trademark of Mitsubishi Electric Corporation.

Adjustment, waveform display, diagnostics, parameter read/write, and test operation can be performed upon a PC. **Compatible PC**

When using setup software (MR Configurator2[™]), use an IBM PC/AT compatible PC that meets the following operating conditions. Hardware Requirements

English version

Chinese version

Ε

С

E	Equipment	Setup software (MR Configurator2™) LEC-MRC2 □	*1	Before using a PC for setting LECSA point table method/program operation method, upgrade to version 1.18U (Japanese version)/ version 1.19V (English version) or later. Refer to Mitsubishi
		Microsoft [®] Windows [®] 10 Edition Microsoft [®] Windows [®] 10 Enterprise Microsoft [®] Windows [®] 10 Pro	*2	Electric Corporation's website for version upgrade information. Windows [®] and Windows Vista [®] are registered trademarks of Microsoft Corporation in the United
		Microsoft [®] Windows [®] 10 Home Microsoft [®] Windows [®] 8.1 Enterprise Microsoft [®] Windows [®] 8.1 Pro	*3	States and other countries. On some PCs, setup software (MR Configurator2 [™]) may not run properly.
		Microsoft [®] Windows [®] 8.1 Microsoft [®] Windows [®] 8 Enterprise Microsoft [®] Windows [®] 8 Pro	*4	The following functions cannot be used. If any of the following functions is used, this product may not operate normally.
*1, 2, 3, 4,	OS	Microsoft® Windows® 8 Microsoft® Windows® 7 Ultimate		Start of application in Windows [®] compatible mode Fast User Switching Remote Desktop
5, 6, 7, 8, 9, 10		Microsoft [®] Windows [®] 7 Enterprise Microsoft [®] Windows [®] 7 Professional Microsoft [®] Windows [®] 7 Home Premium		Windows Touch or Touch
PC		Microsoft [®] Windows [®] 7 Starter Microsoft [®] Windows Vista [®] Ultimate		· Modern UI · Client Hyper-V
		Microsoft [®] Windows Vista [®] Enterprise Microsoft [®] Windows Vista [®] Business		Tablet Mode Virtual desktop
		Microsoft [®] Windows Vista [®] Home Premium Microsoft [®] Windows Vista [®] Home Basic		64-bit OSs are not supported, except for Microsoft [®] Windows [®] 7 or later.
		Microsoft [®] Windows [®] XP Professional, Service Pack 3 or later Microsoft [®] Windows [®] XP Home Edition, Service Pack 3 or later	*5	Multi-display is set, the screen of this product may not operate normally.
	Hard disk	1 GB or more of free space	*6	The size of the text or other items on the screen is not changed to the specified value (96 DPI, 100%, 9 pt.
	Communication interface	Use USB port.		etc.), the screen of this product may not operate nor- mally.
Display		Resolution 1024 x 768 or more Must be capable of high color (16-bit) display. Connectable with the PC above		Changed the resolution of the screen during operating the screen of this product may not operate normally. Please use by "Standard User," "Administrator" in
Keyboard		Connectable with the PC above		Windows Vista [®] or later.
Mouse		Connectable with the PC above		Using a PC for setting Windows [®] 10, upgrade to ver sion 1.52E or later.
Printer		Connectable with the PC above		Using a PC for setting Windows [®] 8.1, upgrade to ver
USB cable ^{*11}		LEC-MR-J3USB		sion 1.25B or later.

Setup Software Compatible Drivers

O a man a tilb la	Setup s	oftware
Compatible driver	MR Configurator™	MR Configurator2 [™]
unver	LEC-MR-SETUP221	LEC-MRC2
LECSA	0	0
LECSB -S	0	0
	0	0
LECSS	0	0
LECSB2-T	—	0
LECSC2-T	—	0
LECSS2-T	—	Ó
LECSN2-T	—	0

- crosoft[®]
- nay not
- n is not 6, 9 pt, ate nor-
- erating, nally. ator" in
- to ver-
- to ver-
- Using a PC for setting Windows®8, upgrade to version 1.20W or later.
- Refer to Mitsubishi Electric Corporation's website for version upgrade information.
- *10 If .NET Framework 3.5 (including .NET 2.0 and 3.0) have been disabled in Windows®7 or later, it is necessarv to enable it.
- *11 Order USB cable separately.
 - This cable is compatible with the setup software (MR Configurator™: LEC-MR-SETUP221□).

Options

USB cable (3 m) (LECSA, LECSB, LECSC, LECSS, LECSB-T, LECSC-T, LECSN-T, LECSS-T common)

LEC-MR-J3USB

* MR-J3USBCBL3M manufactured by Mitsubishi Electric Corporation Weight: 140 g

Cable for connecting PC and driver when using the setup software (MR Configurator2[™]) Do not use any cable other than this cable.

STO cable (3 m) (Only for LECSB2-T^{_}, LECSN2-T^{_}, and LECSS2-T^{_})

LEC-MR-D05UDL3M

* MR-D05UDL3M manufactured by Mitsubishi Electric Corporation

Cable for connecting the driver and device, when using the safety function

Do not use any cable other than this cable.



Weight: 500 g

Battery



* MR-J3BAT manufactured by Mitsubishi Electric Corporation

Battery for replacement

Absolute position data is maintained by installing the battery to the driver.



* The LEC-MR-J3BAT is a single battery that uses lithium metal battery ER6V. When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is transporting products such as shown above, it is necessary to confirm the latest regulations, or the laws and regulations of the country of transport on your own, in order to apply the proper measures. Please contact SMC sales representative for details.

LEC-MR-BAT6V1SET * MR-BAT6V1SET manufactured by Mitsubishi Electric Corporation

Battery for replacement

Absolute position data is maintained by installing the battery to the driver.

Weig


Weight: 60 g

LECS□/LECS□-T Series

LEC-MR-BAT6V1SET-A

* MR-BAT6V1SET-A manufactured by Mitsubishi Electric Corporation

Battery for replacement Absolute position data is maintained by installing the battery to the driver.



* The LEC-MR-BAT6V1SET and LEC-MR-BAT6V1SET-A are assembled batter-

ies that use lithium metal battery 2CR17335A. When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is transporting products such as shown above, it is necessary to confirm the latest regulations, or the laws and regulations of the country of transport on your own, in order to apply the proper measures. Please contact SMC sales representative for details.

Battery Types and Compatible Drivers


Compatible	Battery type			
driver	LEC-MR-J3BAT	LEC-MR-BAT6V1SET	LEC-MR-BAT6V1SET-A	
LECSB -S	0	—	—	
LECSC -S	0	—	—	
LECSS -S	0	—	—	
LECSB -T	—	0	—	
LECSC -T	0	—	—	
LECSS	—	0	—	
LECSN -T	—	_	0	

ECY□ Series

AC Servo Motor Driver Absolute Type LECYM/LECYU Series



How to Order

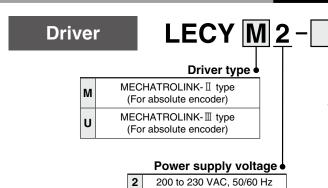

*	If an I/O connector	(CN1) is required, order
	the part number "I	E CVNA" constally

- the part number "LE-CYNA" separately.
- If an I/O cable (CN1) is required, order the part number "LEC-CSNA-1" separately.

• Compatible motor type


	, , , , , , , , , , , , , , , , , , , ,		
Symbol	Туре	Capacity	Encoder
V5	AC servo motor (V6*1)	100 W	
V7	AC servo motor (V7*1)	200 W	Absolute
V8	AC servo motor (V8*1)	400 W	


*1 The symbol shows the motor type (actuator).

4

SMC

Dimensions

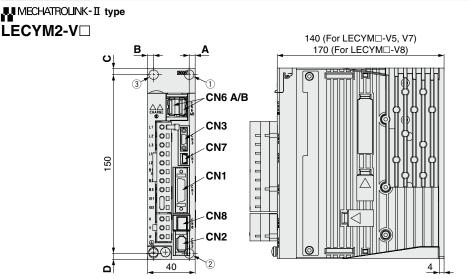

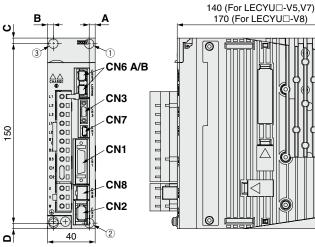

Connector name	Description	
CN1	I/O signal connector	
CN2	Encoder connector	
CN3*1	Digital operator connector	
CN6A	MECHATROLINK- I communication connector	
CN6B	MECHATROLINK- II communication connector	
CN7	PC connector	
CN8	Safety connector	

Digital operator is JUSP-OP05A-1-E manufactured by YASKAWA Electric Corporation. When using the digital operator, it should be provided by the customer.

Motor	Hole	Mou	Mounting dimensions			Mounting
capacity	position	Α	В	С	D	hole
V5 (100 W)	12	5	—	5	5	
V7 (200 W)	12	5	—	5	5	ø5
V8 (400 W)	23	5	5	5	5	

* The mounting hole position varies depending on the motor capacity.

Connector name	Description
CN1	I/O signal connector
CN2	Encoder connector
CN3*1	Digital operator connector
CN6A	MECHATROLINK-II communication connector
CN6B	MECHATROLINK-Il communication connector
CN7	PC connector
CN8	Safety connector

*1 Digital operator is JUSP-OP05A-1-E manufactured by YASKAWA Electric Corporation. When using the digital operator, it should be provided by the customer.

Motor	Hole	Hole Mounting dimension				
capacity	position	Α	В	С	D	hole
V5 (100 W)	12	5	—	5	5	
V7 (200 W)	12	5	—	5	5	ø5
V8 (400 W)	23	5	5	5	5	

 The mounting hole position varies depending on the motor capacity.

39

Specifications

Model			LECYM2-V5 LECYM2-V7 LECYM					
Compatible motor cap	bacity [W]		100	200	400			
Compatible encoder			Absolute 20-bit encoder (Resolution: 1048576 p/rev)					
Main circuit power	Power voltage [V	/]	Thi	ree phase 200 to 230 VAC (50/60	Hz)			
supply .	Allowable voltage flu	ctuation [V]		Three phase 170 to 253 VAC				
0	Power voltage [V	/]	Single phase 200 to 230 VAC (50/60 Hz)					
Control power supply	Allowable voltage flu	ctuation [V]		Single phase 170 to 253 VAC				
Power supply capacity	y (at rated output) [/	A]	0.91	1.6	2.8			
nput circuit			NF	PN (Sink circuit)/PNP (Source circ	cuit)			
Parallel input (7 inputs) Number of 7 optional allocations inputs			[Initial allocation] · Homing deceleration switch (/DEC) · External latch (/EXT 1 to 3) · Forward run prohibited (P-OT), reverse run prohibited (N-OT) [Can be allocated by setting the parameters] · Forward external torque limit (/P-CL), reverse external torque limit (/N-CL) Signal allocations can be performed, and positive and negative logic can be changed.					
	Number of fixed allocations	1 output	· Servo alarm (ALM)					
Parallel output (4 outputs)	Number of optional allocations	3 outputs	[Initial allocation] · Lock (/BK) [Can be allocated by setting the parameters] · Positioning completion (/COIN) · Speed limit detection (/VIT) · Speed coincidence detection (/V-CMP) · Rotation detection (/TGON) · Warning (/WARN) · Servo ready (/S-RDY) · Near (/NEAR) · Torque limit detection (/CLT) Signal allocations can be performed, and positive and negative logic can be changed.					
	Communication	protocol	MECHATROLINK- I					
	Station address		41H to 5FH					
	Transmission sp	eed	10 Mbps					
MECHATROLINK	Transmission cy		250 μs, 0.5 ms to 4 ms (Multiples of 0.5 ms)					
communication	Number of transmis		17 bytes, 32 bytes					
	Max. number of		30					
	Cable length		Overall cable length: 50 m or less, Cable length between the stations: 0.5 m or more					
	Control method		•					
Command method	Command input		Position, speed, or torque control with MECHATROLINK- I communication MECHATROLINK- I command (Motion, data setting, monitoring, or adjustment)					
	Gain adjustment		Tuning-less	Advanced auto tuning/One-para	meter tuning			
	Communication	setting	USB	communication, RS-422 commur	ication			
	Torque limit		Internal torque limit, external torque limit, and torque limit by analog command					
Function	Encoder output		Phase A, B, Z: Line driver output					
	Emergency stop		CN8 Safety function					
	Overtravel		Dynamic brake stop, deceleration to a stop, or free run to a stop at P-OT or N-OT					
	Alarm		Alarm	n signal, MECHATROLINK- ${\mathbb I}$ cor	nmand			
Operating temperature	e range [°C]			0 to 55 (No freezing)				
Operating humidity ra	inge [%RH]			90 or less (No condensation)				
Storage temperature r	range [°C]			-20 to 85 (No freezing)				
Storage humidity rang	ge [%RH]			90 or less (No condensation)				
Insulation resistance	[MΩ]			10 MΩ (500 VDC)				
Weight [g]			9	00	1000			

LECY Series


$LECY^M_U$ Series

Specifications

MECHATROLINK-III	Туре
------------------	------

	Model		LECYU2-V5	LECYU2-V7	LECYU2-V8			
Compatible motor cap	pacity [W]		100 200 400					
Compatible encoder			Absolute	20-bit encoder (Resolution: 1048	576 p/rev)			
Main circuit power	Power voltage [v]	Three phase 200 to 230 VAC (50/60 Hz)					
supply	Allowable voltage flu	uctuation [V]	Three phase 170 to 253 VAC					
	Power voltage [V]	Single phase 200 to 230 VAC (50/60 Hz)					
Control power supply	Allowable voltage flu	uctuation [V]		Single phase 170 to 253 VAC				
Power supply capacit	y (at rated output) [A]	0.91	1.6	2.8			
Input circuit			NF	N (Sink circuit)/PNP (Source circ	cuit)			
Parallel input (7 inputs)	Number of optional allocations	7 inputs	[Can be allocated by setting the Forward external torque limit), reverse run prohibited (N-OT)	limit (/N-CL)			
	Number of fixed allocations 1 output		· Servo alarm (ALM)					
Parallel output (4 outputs)	Number of optional allocations	3 outputs	[Initial allocation] · Lock (/BK) [Can be allocated by setting the parameters] · Positioning completion (/COIN) · Speed limit detection (/VLT) · Speed coincidence detection (/V-CMP) · Rotation detection (/TGON) · Warning (/WARN) · Servo ready (/S-RDY) · Near (/NEAR) · Torque limit detection (/CLT) Signal allocations can be performed, and positive and negative logic can be changed.					
	Communication protocol		MECHATROLINK-II					
	Station address	-	03H to EFH					
	Transmission sp	beed	100 Mbps					
MECHATROLINK	Transmission cy	/cle	125 μs, 250 μs, 500 μs, 750 μs, 1 ms to 4 ms (Multiples of 0.5 ms)					
communication	Number of transmi	ssion bytes						
	Max. number of	stations	62					
	Cable length		Cable length b	etween the stations: 0.5 m or mo	re, 75 m or less			
	Control method		Position, speed, or torque control with MECHATROLINK-II communication					
Command method	Command input		MECHATROLINK-II command (Motion, data setting, monitoring, or adjustment)					
	Gain adjustmen	t	Tuning-less	Advanced auto tuning/One-para/	meter tuning			
	Communication	setting	USB communication, RS-422 communication					
	Torque limit		Internal torque limit, external torque limit, and torque limit by analog command					
Function	Encoder output		Phase A, B, Z: Line driver output					
	Emergency stop)		CN8 Safety function				
	Overtravel		Dynamic brake stop, de	celeration to a stop, or free run to	o a stop at P-OT or N-OT			
	Alarm		Alarm	signal, MECHATROLINK- \mathbbm{I} cor	nmand			
Operating temperature	e range [°C]			0 to 55 (No freezing)				
Operating humidity ra	inge [%RH]			90 or less (No condensation)				
Storage temperature r	range [°C]			-20 to 85 (No freezing)				
Storage humidity rang	ge [%RH]			90 or less (No condensation)				
Insulation resistance	[MΩ]			10 MΩ (500 VDC)				
Weight [g]			90	00	1000			

Power Supply Wiring Example: LECY

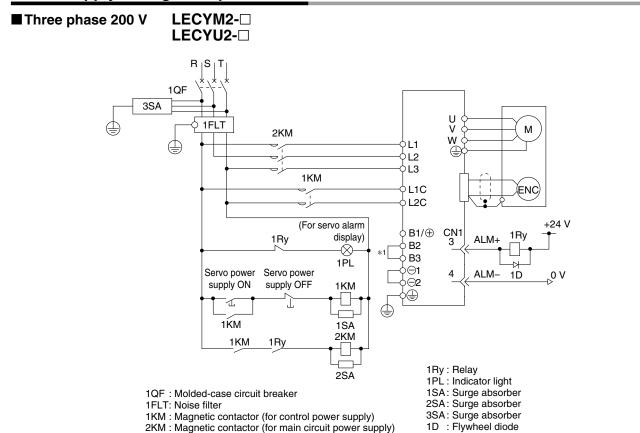

*1 For the LECY 2-V5, LECY 2-V7, and LECY 2-V8, terminals B2 and B3 are not short-circuited. Do not short-circuit these terminals.

Main Circuit Power Supply Connector * Accessory


Terminal name	Function	Details					
L1	Main circuit power	Connect the main circuit power supply.					
L2		Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2					
L3	supply	Three phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2, L					
L1C	Control power supply	Connect the control power supply.					
L2C	Control power supply	Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1C, L2					
B1/+	External regenerative	When the regenerative resistor is required, connect it					
B2	resistor	between terminals $B1(+)$ and $B2$.					
B3	connection terminal						
O 1	Main circuit negative	-1 and -2 are connected at shipment.					
2	terminal						

Motor Connector * Accessory

		· y
Terminal name	Function	Details
U	Servo motor power (U)	
V	Servo motor power (V)	Connect to motor cable (U, V, W).
W	Servo motor power (W)	

Power Supply Wire Specifications

Item	Specifications				
Applicable	L1, L2, L3, L1C, L2C				
wire size	Single wire, Twisted wire, AWG14 (2.0 mm ²)				
Stripped wire length	8 to 9 mm				

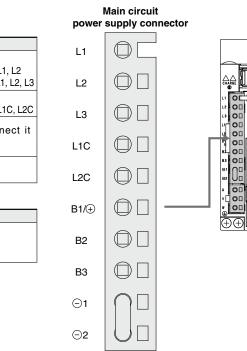

Motor connector


- U D
- v 🛛 🔘

W

LECS // LECS - T Series


$LECY_{U}^{M}$ Series

Control Signal Wiring Example: LECYM

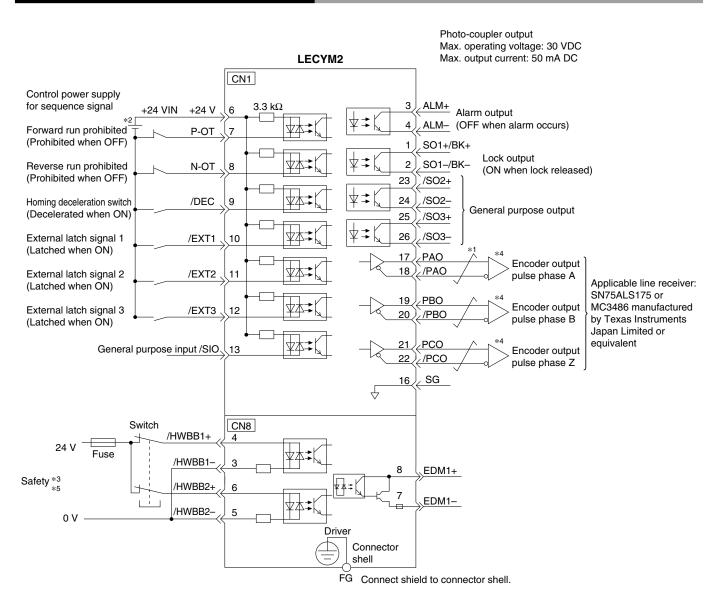

- *1 \neq shows twisted-pair wires.
- *2 The 24 VDC power supply is not included. Use a 24 VDC power supply with double insulation or reinforced insulation.
- *3 When using the safety function, a safety function device must be connected to the wiring that is necessary to activate the safety function. Otherwise, the servo motor is not turned ON. When not using the safety function, use the driver with the Safety Jumper Connector (provided as an accessory) inserted into the CN8.
- *4 Always use line receivers to receive the output signals.
- ** The functions allocated to the input signals /DEC, P-OT, N-OT, /EXT1, /EXT2, and /EXT3, and the output signals /SO1, /SO2, and /SO3 can be changed by setting the parameters.
- *5 It is a safety function equivalent to the STO function (IEC 61800-5-2) using the hard wire base block function (HWBB).


Control Signal Wiring Example: LECYU

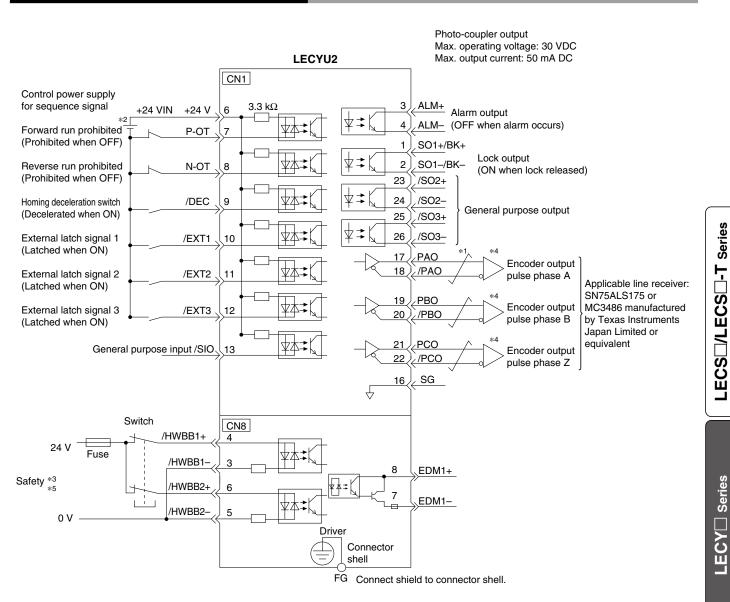

- *1 \neq shows twisted-pair wires.
- *2 The 24 VDC power supply is not included. Use a 24 VDC power supply with double insulation or reinforced insulation.
- *3 When using the safety function, a safety function device must be connected to the wiring that is necessary to activate the safety function. Otherwise, the servo motor is not turned ON. When not using the safety function, use the driver with the Safety Jumper Connector (provided as an accessory) inserted into the CN8.
- *4 Always use line receivers to receive the output signals.
- ** The functions allocated to the input signals /DEC, P-OT, N-OT, /EXT1, /EXT2, and /EXT3, and the output signals /SO1, /SO2, and /SO3 can be changed by setting the parameters.
- *5 It is a safety function equivalent to the STO function (IEC 61800-5-2) using the hard wire base block function (HWBB).

LECY^M_U Series

Options

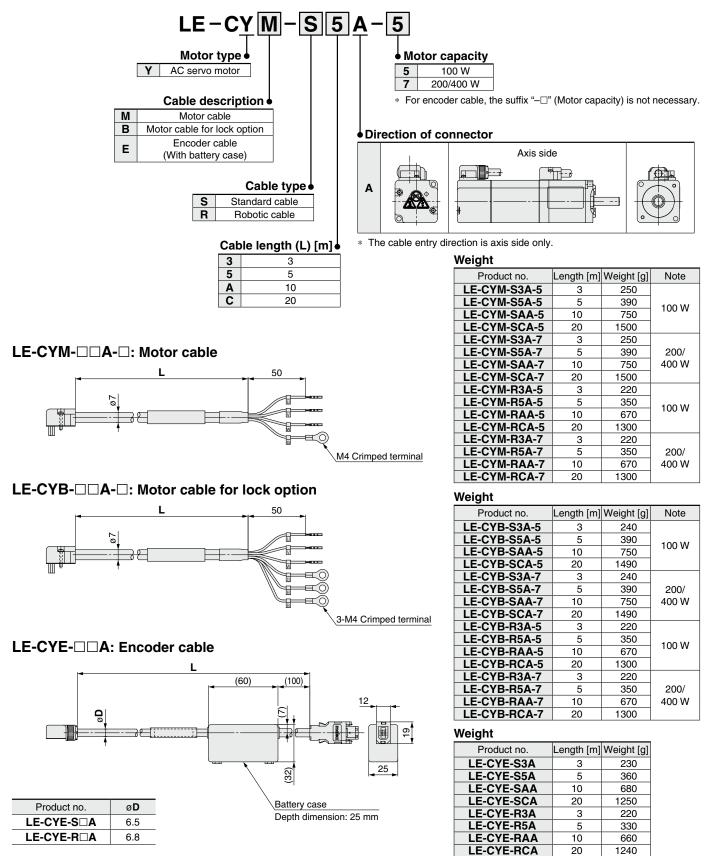



Motor cable, Motor cable for lock option, Encoder cable (LECYM/LECYU common)


* LE-CYM-S□A-□ is JZSP-CSM0□-□-E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYB-S□A-□ is JZSP-CSM1□-□-E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYE-S□A is JZSP-CSP05-□-E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYM-R□A-□ is JZSP-CSM2□-□□-E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYB-R□A-□ is JZSP-CSM3□-□-E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYE-R□A is JZSP-CSP25-□-E manufactured by YASKAWA CONTROLS CO., LTD.



Options








Weight	
Product no.	Weight [g]
LE-CYNA	25

* LE-CYNA: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent

* Conductor size: AWG24 to 30

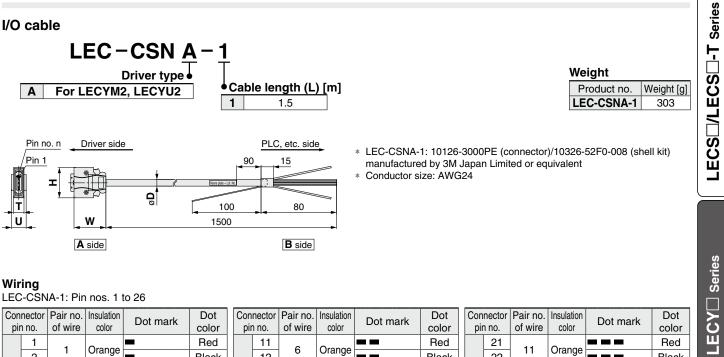


			Insulation	Dot mark	Dot			Pair no.	Insulation	Dot mark	Dot	Connector pin no.			Insulation	Dot mark	Dot
рі	n no.	of wire	color		color	pii	n no.	of wire	color		color	pir	1 NO.	of wire	color		color
	1	4	Orange		Red		11	6	Orango		Red		21	11	Orange		Red
	2	I	Orange		Black		12	Orange		Black		22		Orange		Black	
	3	2	Light		Red		13	7	Light		Red	side	23	12	Light		Red
	4	2	gray		Black		14	1	gray		Black	A	24	12	gray		Black
side	5	3	White		Red	side	15	8	White		Red		25	13	White		Red
A S	6	5	vvriite		Black	A	16	0	o winte		Black		26	15	vvnite		Black
	7	4	Yellow		Red		17	9	Yellow		Red						
	8	4	renow		Black		18	9	renow		Black						
	9	5	Pink		Red		19	10	Pink		Red						
	10	5	FILK		Black		20		FILK		Black						

Cable O.D.		Dimensions/Pin No.						
Product no.	øD	Product no.	W	Н	Т	U	Pin no. n	
LEC-CSNA-1	11.1	LEC-CSNA-1	39	37.2	12.7	14	14	


Specific Product Precautions

LECY^M_U Series

Options

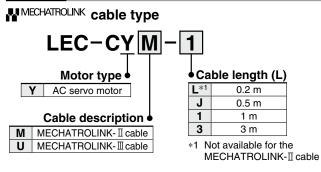


* LEC-CYMis JEPMC-W6002- E manufactured by YASKAWA CONTROLS CO., LTD.
LEC-CYUis JEPMC-W6012E manufactured by YASKAWA CONTROLS CO., LTD.

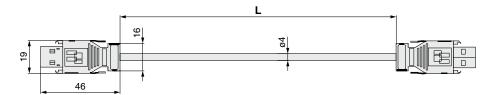

Weight

Product no.	Length [m]	Weight [g]
LEC-CYM-J	0.5	50
LEC-CYM-1	1	80
LEC-CYM-3	3	200

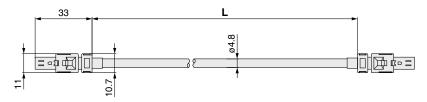


Weight		
Product no.	Length [m]	Weight [g]
LEC-CYU-L	0.2	21
LEC-CYU-J	0.5	41
LEC-CYU-1	1	75
LEC-CYU-3	3	205

Terminating connector for MMECHATROLINK-I


LEC-CYRM

* LEC-CYRM is JEPMC-W6022-E manufactured by YASKAWA CONTROLS CO., LTD.

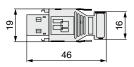

Weight: 10 g

Options



LECYM2 LECYU2 Drivers

Setup software (SigmaWin+™) (LECYM/LECYU common)

* Please download the SigmaWin+[™] via our website.

SigmaWin+[™] is a registered trademark or trademark of YASKAWA Electric Corporation.

Adjustment, waveform display, parameter read/write, and test operation can be performed upon a PC. Compatible PC

When using setup software (SigmaWin+TM), use an IBM PC/AT compatible PC that meets the following operating conditions.

Hardware Requirements

Equipment Setup software (SigmaWin+™)		Setup software (SigmaWin+™)	
*1, 2, 3, 4 PC	OS	Windows [®] XP ^{*5} , Windows Vista [®] , Windows [®] 7 (32-bit/64-bit)	
	Available HD space	valiable HD space 350 MB or more (When the software is installed, 400 MB or more is recommended.)	
	Communication interface	Use USB port.	
Display		XVGA monitor (1024 x 768 or more, "The small font is used.")	
		256 color or more (65536 color or more is recommended.)	
		Connectable with the PC above	
Keyboard		Connectable with the PC above	
Mouse		Connectable with the PC above	
Printer		Connectable with the PC above	
USB cable		LEC-JZ-CVUSB ^{*6}	
Other		Adobe Reader Ver. 5.0 or higher (* Except Ver. 6.0)	

*1 Windows, Windows Vista[®], Windows[®] 7 are registered trademarks of Microsoft Corporation in the United States and/or other countries.

*2 On some PCs, this software may not run properly.

*3 Not compatible with 64-bit Windows® XP and 64-bit Windows Vista®

*4 For Windows® XP, please use it by the administrator authority (When installing and using it.).

*5 In PC that uses the program to correct the problem of HotfixQ328310, it is likely to fail in the installation. In that case, please use the program to correct the problem of HotfixQ329623.


*6 Order USB cable separately.

Battery (LECYM/LECYU common) LEC-JZ-CVBAT

* JZSP-BA01 manufactured by YASKAWA CONTROLS CO., LTD.

Battery for replacement


Absolute position data is maintained by installing the battery to the battery case of the encoder cable.



Weight: 10 g

USB cable (2.5 m) LEC-JZ-CVUSB

JZSP-CVS06-02-E manufactured by YASKAWA CONTROLS CO., LTD.
 Cable for connecting PC and driver when using the setup software (SigmaWin+™)
 Do not use any cable other than this cable.



* The LEC-JZ-CVBAT is a single battery that uses lithium metal battery ER3V.

When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Dangerous (IMO). If a customer is transporting products such as shown above, it is necessary to confirm the latest regulations, or the laws and regulations of the country of transport on your own, in order to apply the proper measures. Please contact SMC sales representative for details.

Cable for safety function device (3 m) LEC-JZ-CVSAF

* JZSP-CVH03-03-E manufactured by YASKAWA CONTROLS CO., LTD. Cable for connecting the driver and device

when using the safety function Do not use any cable other than this cable.



Weight: 160 g

Weight: 150 g

=----

Specific Product Precautions



LECS /LECS -T/LECY Series Specific Product Precautions 1

Be sure to read this before handling the products. For safety instructions and electric actuator precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Design / Selection

Warning

1. Be sure to apply the specified voltage.

Otherwise, malfunction or breakage may occur. If the applied voltage is lower than the specified voltage, it is possible that the load will not be able to be moved due to an internal voltage drop of the driver. Please check the operating voltage before use.

- **2.** Do not operate the product beyond the specifications. Otherwise, a fire, malfunction, or actuator damage may result. Please check the specifications before use.
- **3. Install an emergency stop circuit.** Please install an emergency stop outside of the enclosure so that the system operation can be stopped immediately and the power supply can be intercepted.
- 4. In order to prevent any damage caused by the breakdown or malfunction of the driver and its peripheral devices, a backup system should be established in advance by giving a multiple-layered structure or a failsafe design to the equipment, etc.
- 5. If the danger of human injury is expected due to abnormal heat generation, smoking, ignition, etc., of the driver and its peripheral devices, cut off the power supply of the product and the system immediately.
- 6. The parameters of the driver are set to initial values. Please change the parameters according to the specifications of the customer's equipment before use. Refer to the operation manual for parameter details.

Handling

AWarning

1. Do not touch the inside of the driver and its peripheral devices.

Doing so may cause an electric shock or damage to the driver.

2. Do not perform the operation or setting of the product with wet hands.

Doing so may cause an electric shock.

3. Products with damage or those missing any components should not be used.

An electric shock, fire, or injury may result.

4. Use only the specified combination between the electric actuator and the driver.

Failure to do so may cause damage to the actuator or the driver.

Be careful not to be hit by workpieces while the actuator is moving.

It may cause an injury.

6. Do not connect the power supply or power on the product before confirming the area to which the work-piece moves is safe.

The movement of the workpiece may cause an accident.

- 7. Do not touch the product when it is energized and for some time after the power has been disconnected, as it is very hot. Doing so may lead to a burn due to the high temperature.
- 8. Before installation, wiring, and maintenance, the voltage should be checked with a tester 5 minutes after the power supply has been turned off. Otherwise, an electric shock, fire, or injury may result.

Handling

Warning

9. Static electricity may cause a malfunction or break the driver. Do not touch the driver while power is supplied.

When touching the driver for maintenance, take sufficient measures to eliminate static electricity.

- 10. Do not use the product in an area where dust, powder dust, water, chemicals, or oil is in the air.
- 11. Do not use the product in an area where a magnetic field is generated.

It will cause failure or malfunction.

- 12. Do not install the product in an environment containing flammable gas, explosive gas, or corrosive gas. It could lead to fire, explosion, or corrosion.
- 13. Radiant heat from strong heat sources, such as a furnace, direct sunlight, etc., should not be applied to the product.

It will cause failure of the driver or its peripheral devices.

14. Do not use the product in an environment subject to a temperature cycle.

It will cause failure of the driver or its peripheral devices.

15. Do not use the product in a place where surges are generated.

When there are units that generate a large amount of surge around the product (e.g. solenoid type lifters, high-frequency induction furnaces, motors, etc.), this may cause deterioration or damage to the product's internal circuit. Avoid sources of surge generation and crossed lines.

- 16. Do not install the product in an environment under the effect of vibrations and impacts. It will cause failure or malfunction.
- 17. When a surge-generating load, such as a relay or solenoid valve, is driven directly, use a product that incorporates a surge absorption element.

Installation

AWarning

1. Install the driver and its peripheral devices on a fireproof material.

Direct installation on or near a flammable material may cause a fire.

2. Do not install the product in a place subject to vibrations and impacts.

It will cause failure or malfunction.

- 3. The driver should be mounted on a vertical wall in a vertical direction. Also, be sure not to cover the driver's suction/exhaust ports.
- 4. Install the driver and its peripheral devices on a flat surface.

If the mounting surface is distorted or uneven, an unacceptable force may be added to the housing, etc., causing problems.



LECS /LECS -T/LECY Series Specific Product Precautions 2

Be sure to read this before handling the products. For safety instructions and electric actuator precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Power Supply

≜Caution

1. Use a power supply that has low noise between lines and between the power and ground.

In cases where noise is high, an isolation transformer should be used.

2. To prevent lightning surges, appropriate measures should be taken. Ground the surge absorber for lightning separately from the grounding of the driver and its peripheral devices.

Wiring


Warning

- The driver will be damaged if a commercial power supply (100/200 V) is added to the driver's servo motor power (U, V, and W). Be sure to check wiring for mistakes when the power supply is turned on.
- 2. Connect the ends of the U, V, and W wires of the motor cable correctly to the phases (U, V, and W) of the servo motor power. If these wires do not match up, the servo motor cannot be controlled.

Grounding

Warning

 For grounding the actuator, connect the copper wire of the actuator to the driver's protective earth (PE) terminal and connect the copper wire of the driver to the earth via the control panel's protective earth (PE) terminal. Do not connect them directly to the control panel's protective earth (PE) terminal.

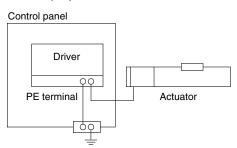

2. In the unlikely event that a malfunction is caused by the ground, please disconnect it.

Maintenance

A Warning

- 1. Perform a maintenance and inspection periodically. Confirm wiring and screws are not loose. Loose screws or wires may cause unintentional malfunction.
- 2. Conduct an appropriate functional inspection after completing the maintenance and inspection. At times where the equipment or machinery does not operate properly, conduct an emergency stop of the system. Otherwise, an unexpected malfunction may occur and it will become impossible to ensure safety. Conduct a test of the emergency stop in order to confirm the safety of the equipment.
- 3. Do not disassemble, modify, or repair the driver and its peripheral devices.
- 4. Do not put anything conductive or flammable inside the driver.

It may cause a fire.

- 5. Do not conduct an insulation resistance test or withstand voltage test on this product.
- 6. Ensure sufficient space for maintenance activities. Design the system allowing the required space for maintenance and inspection.

Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.